

### Installation guide

**A**



Fix the bracket to the wall using the screws supplied, taking care not to deform it.

**B**




Turn on the device by pressing the button on the back.

**C**




Fix the siren on the bracket with the appropriate locking screw.

**D**

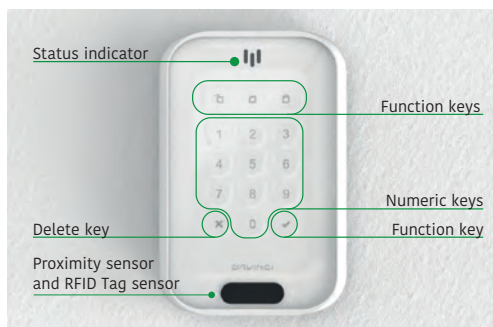

### Configuration Idea via app D'AVINCI

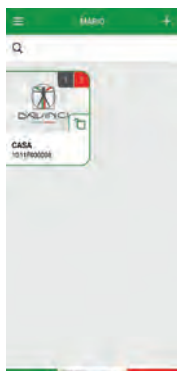

Open the D'AVINCI app where the first system has been previously created.



Before scanning the QR code on the keypad Press the Add Device button. Type the requested data.



Press the keypad icon that has been added to enter the keypad status. Select the gear icon on the top right to program the device.

