


CADELL 52
SG-ML60 MORTICE LOCK INSTALLATION TEMPLATE

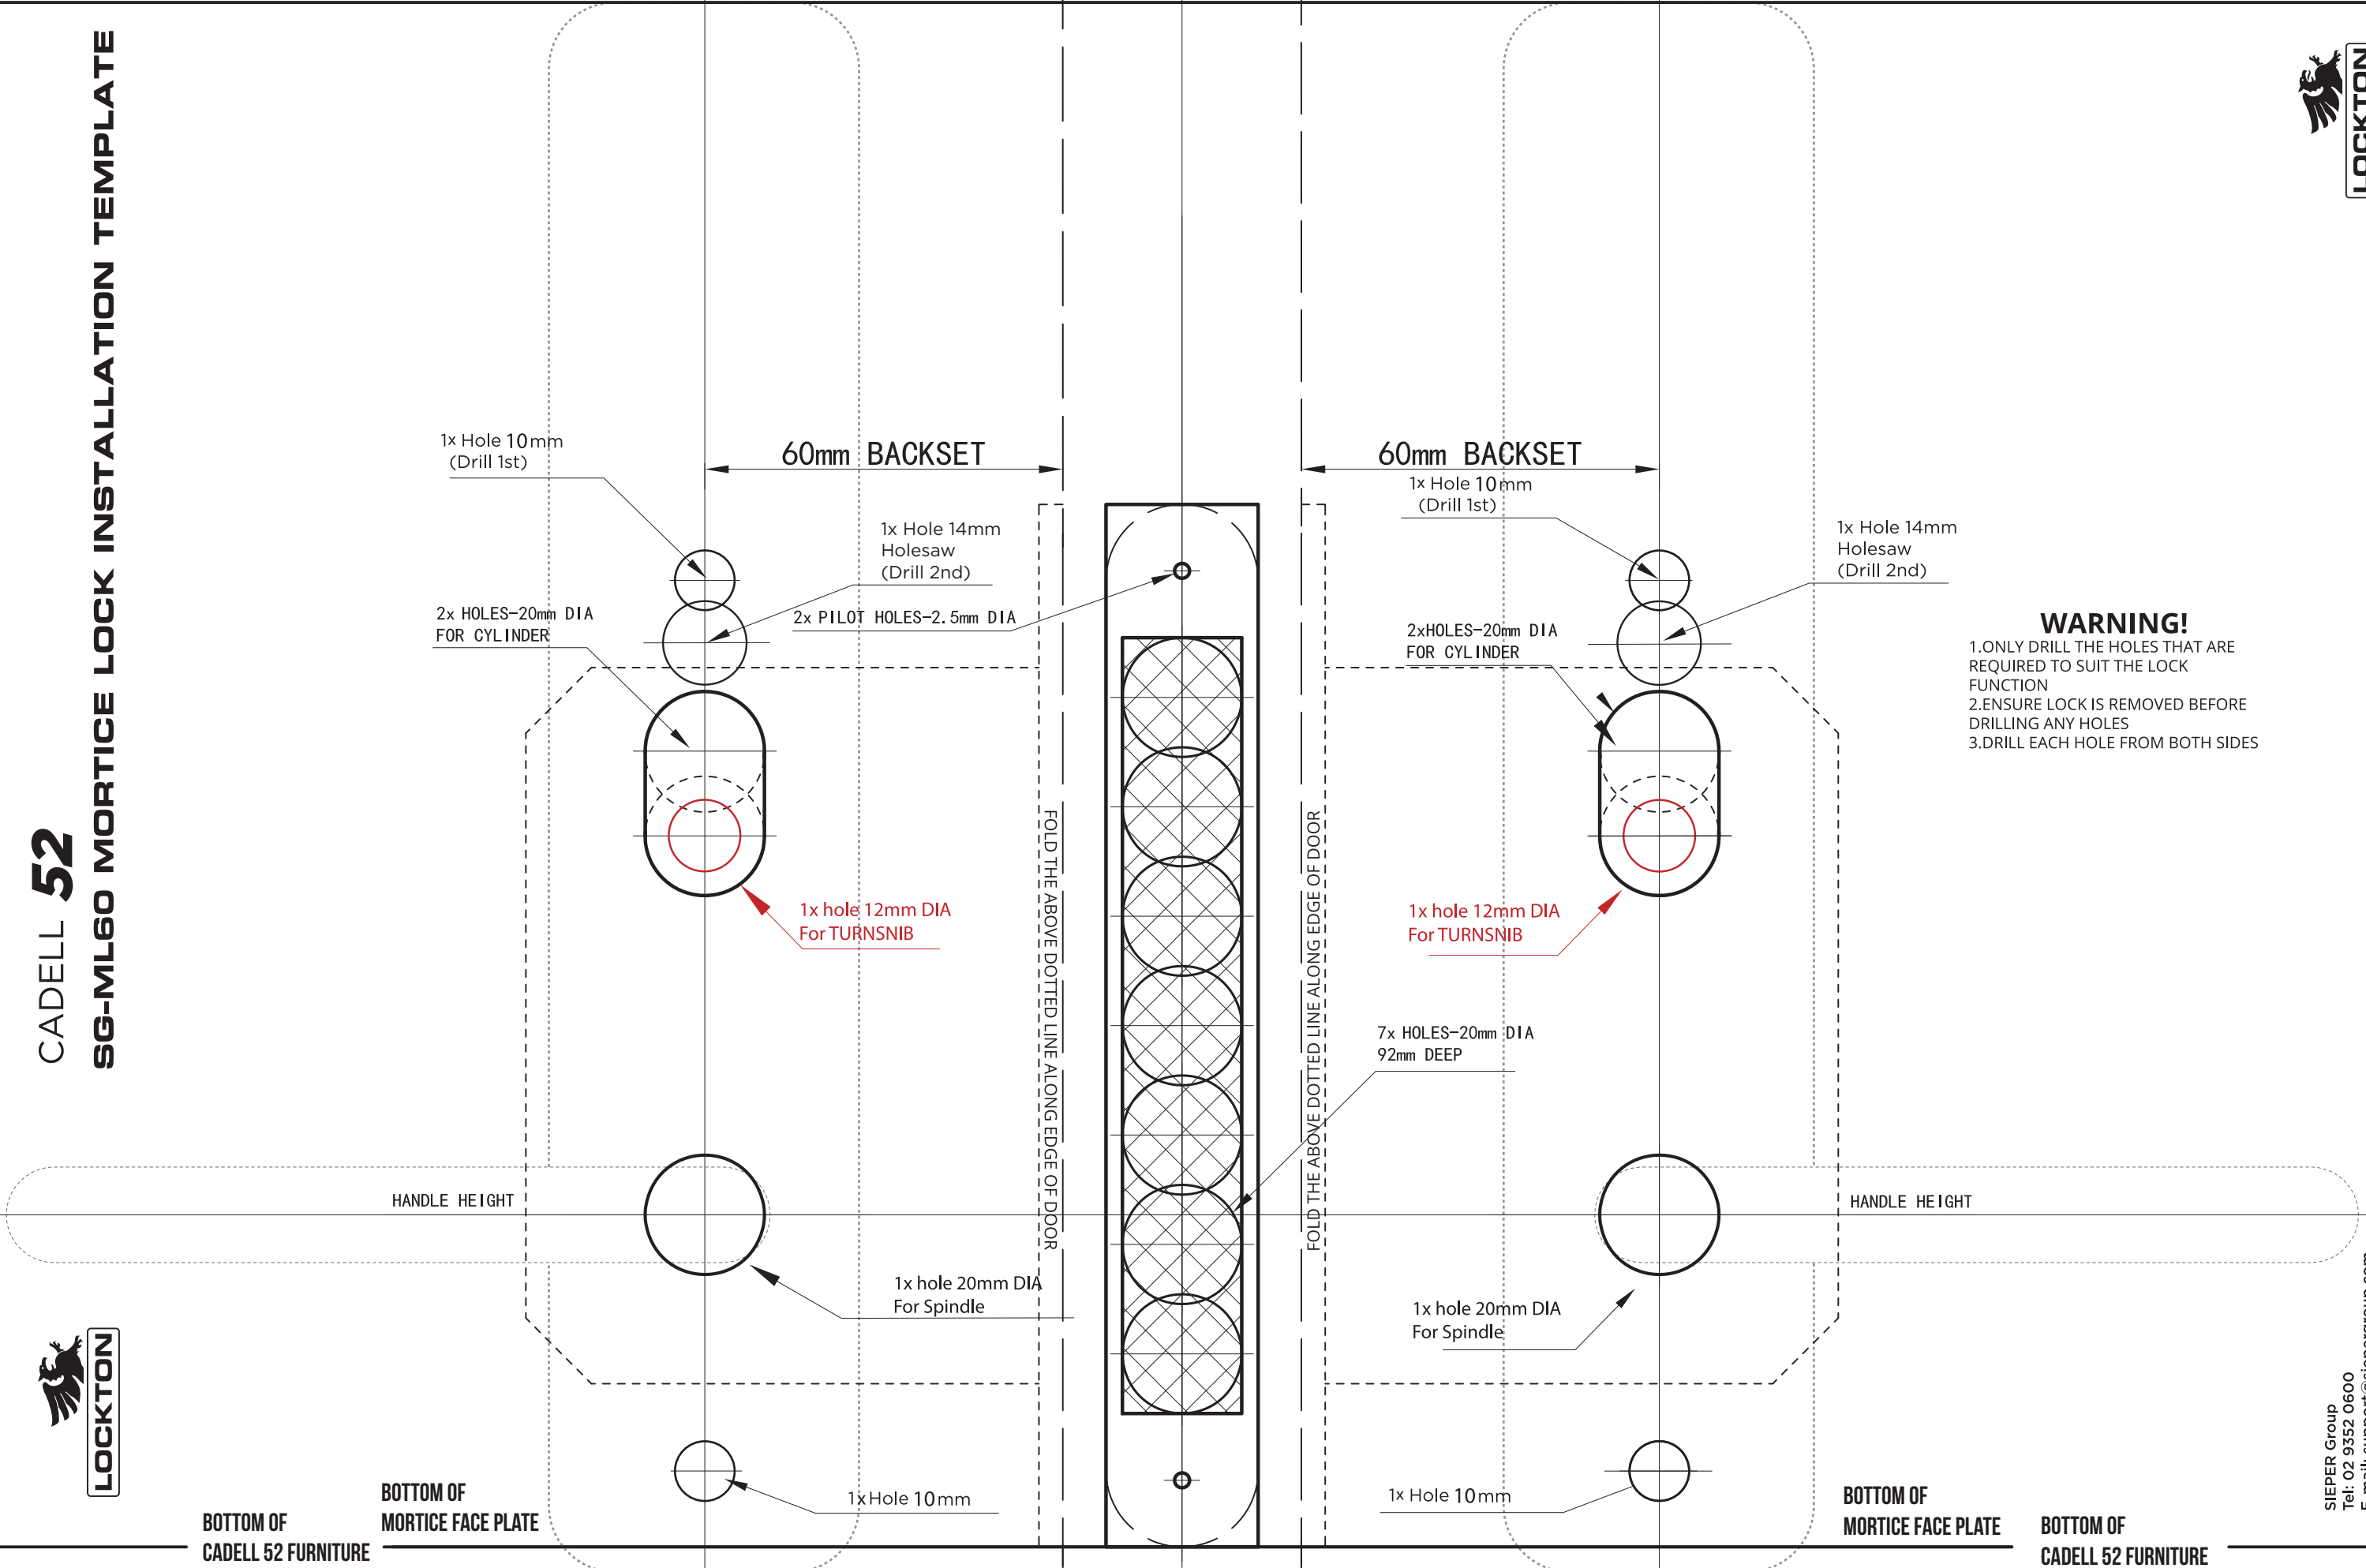

WARNING!
1. ONLY DRILL THE HOLES THAT ARE
REQUIRED TO SUIT THE LOCK
FUNCTION
2. ENSURE LOCK IS REMOVED BEFORE
DRILLING ANY HOLES
3. DRILL EACH HOLE FROM BOTH SIDES