



CADELL 52 SG-ML95 MORTICE LOCK INSTALLATION TEMPLATE



BOTTOM OF CADELL 52 FURNITURE

TOP OF
CADELL 52 FURNITURE


BOTTOM OF
MORTICE FACE PLATE

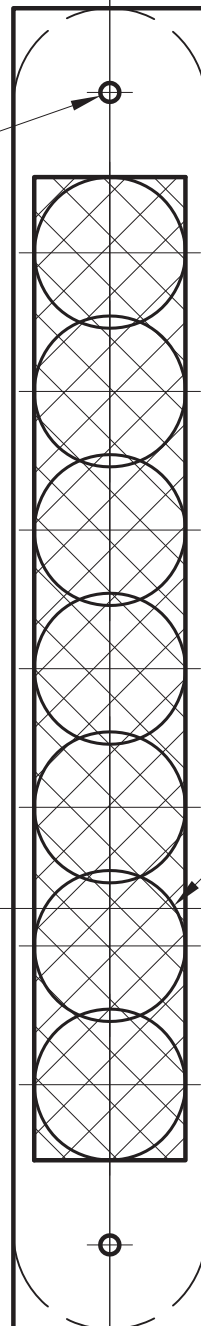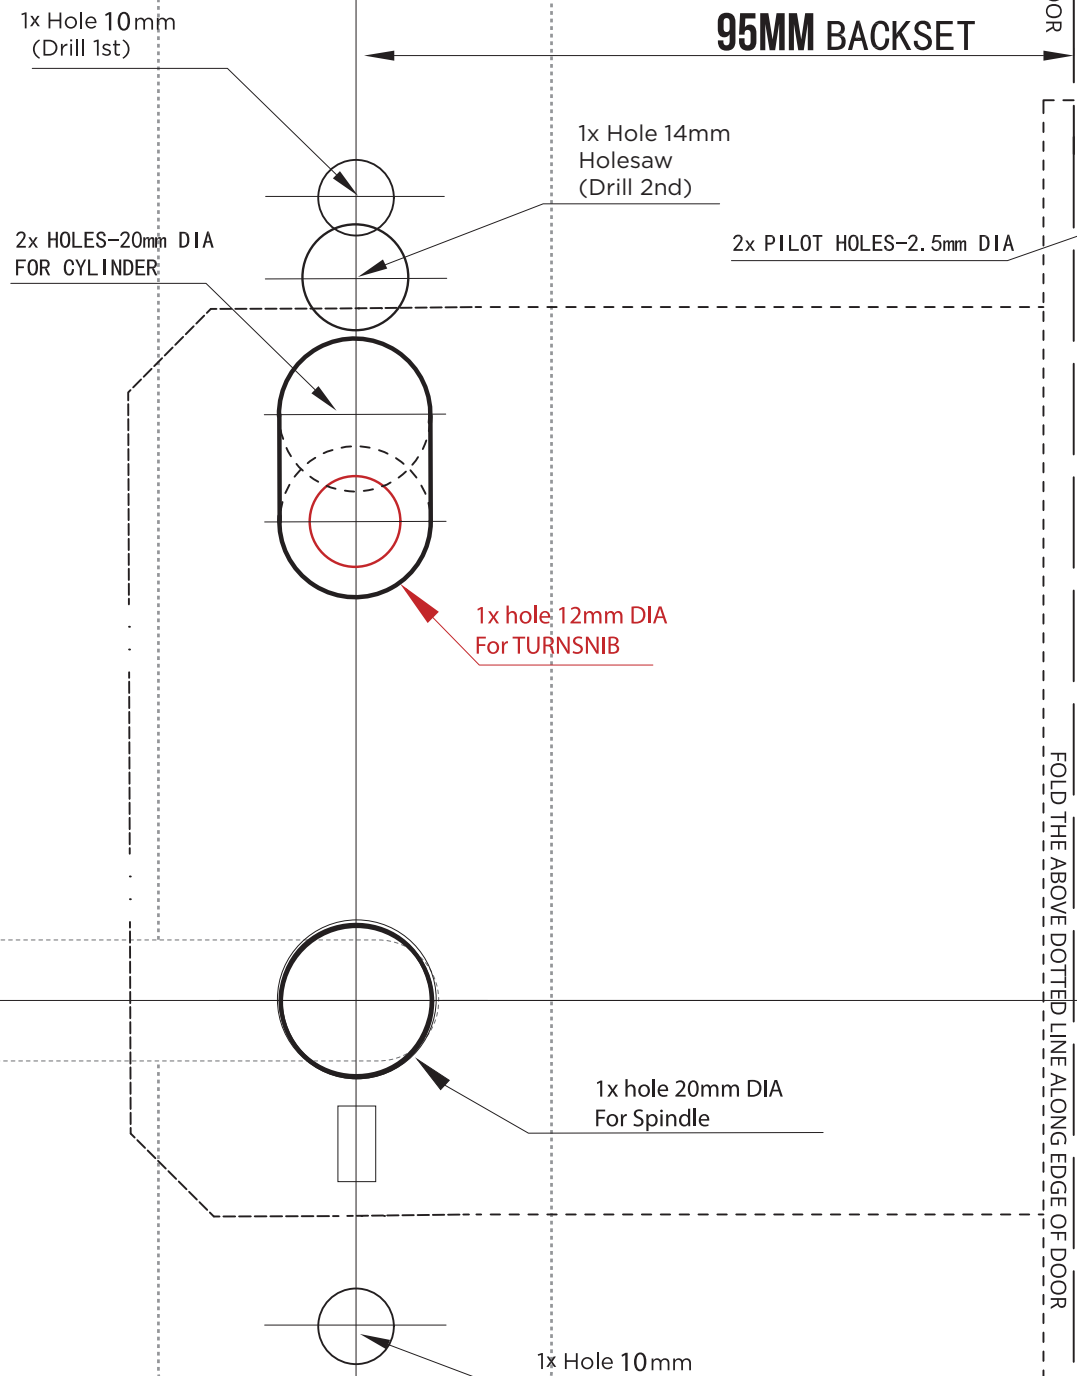

FOLD THE ABOVE DOTTED LINE ALONG EDGE OF DOOR

7x HOLES-20mm DIA
127mm DEEP

95MM BACKSET

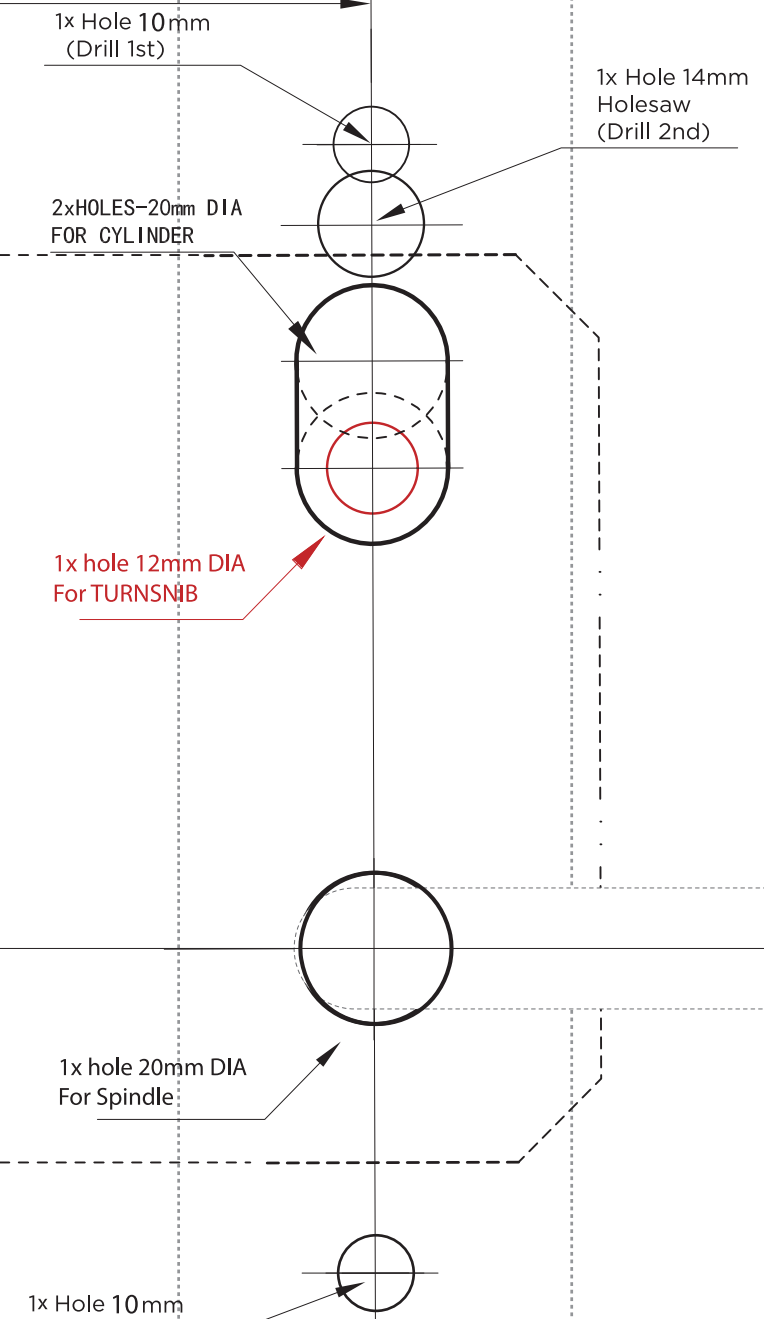

BOTTOM OF
MORTICE FACE PLATE

TOP OF
CADELL 52 FURNITURE

WARNING!

1. ONLY DRILL THE HOLES THAT ARE REQUIRED TO SUIT THE LOCK FUNCTION
2. ENSURE LOCK IS REMOVED BEFORE DRILLING ANY HOLES
3. DRILL EACH HOLE FROM BOTH SIDES



SIEPER Group
Tel: 02 9352 0600
E-mail: support@siepergroup.com
www.sglocks.com.au

BOTTOM OF CADELL 52 FURNITURE