




**LOCKTON**  
commercial

# INSTALLATION INSTRUCTIONS

## 590 SERIES MORTICE LOCKS


### (1) PREPARE DOOR STILE

Cut opening into door stile to suit face plate. Drill holes for mounting screws and cylinders to dimensions shown.

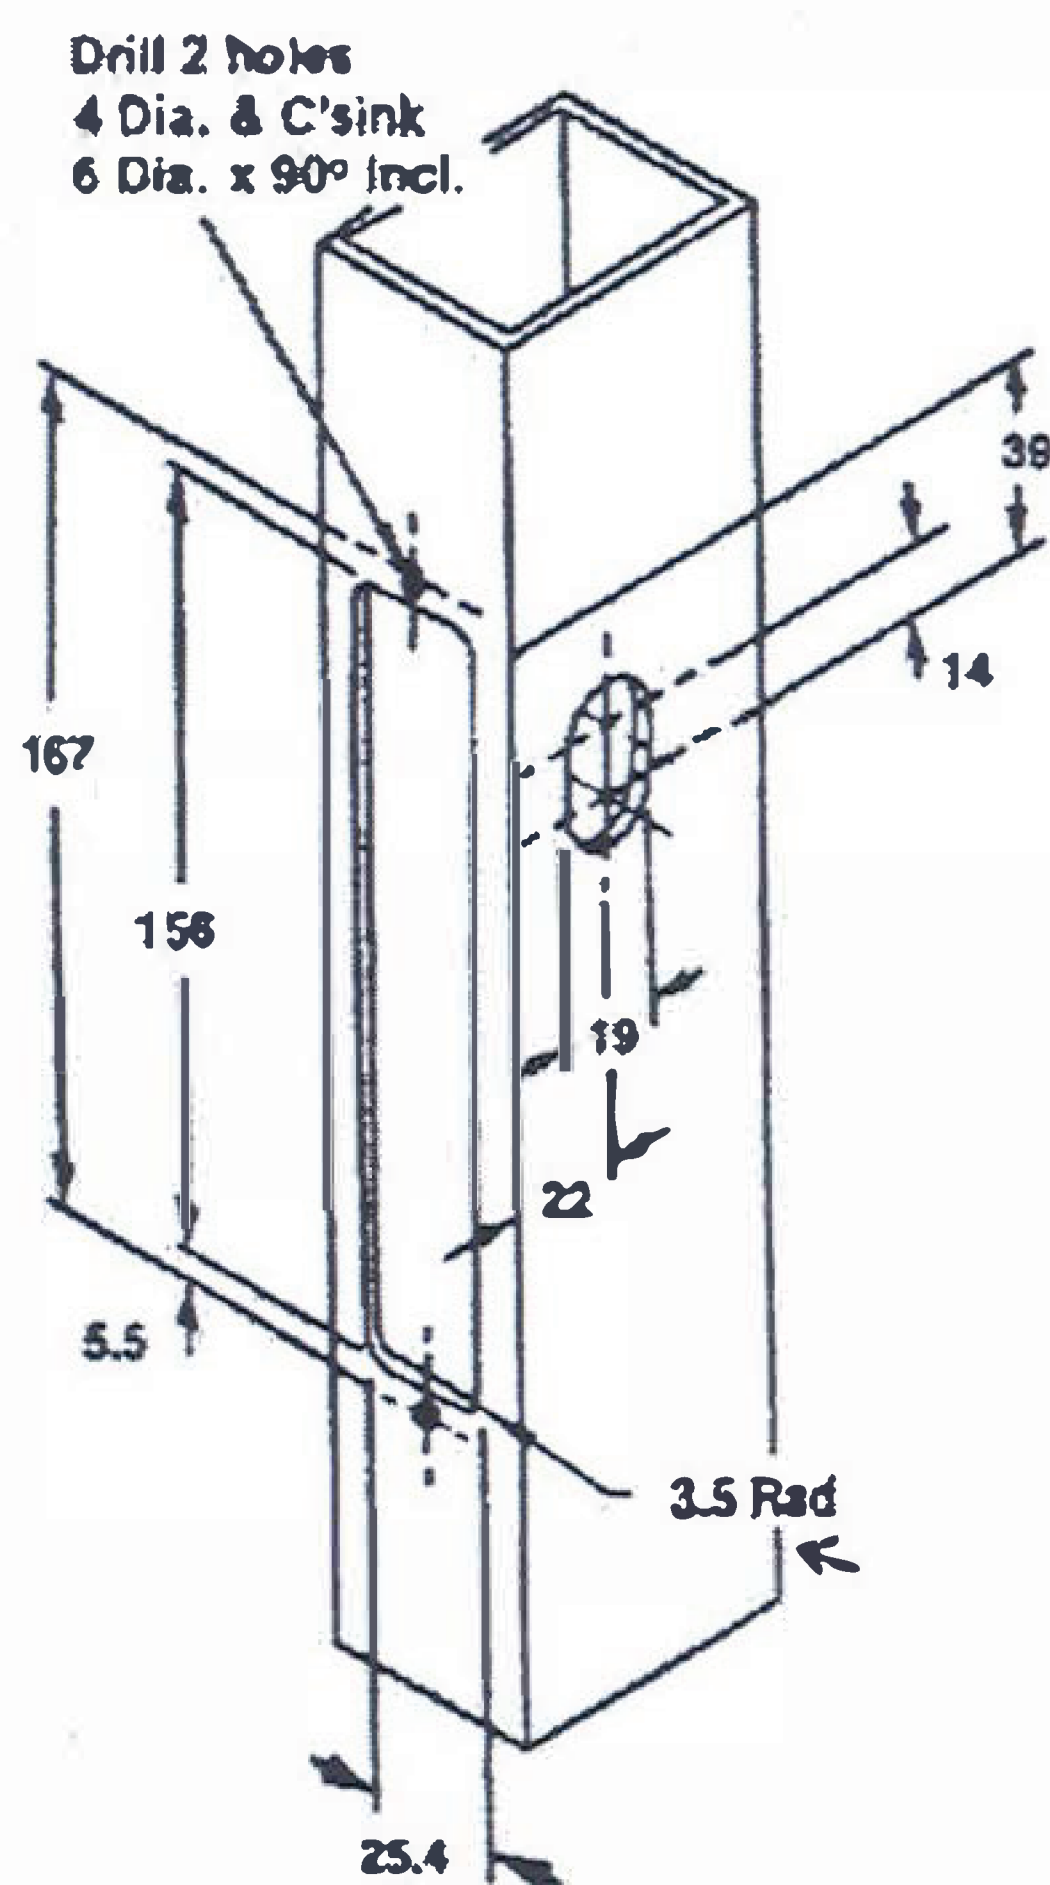


### (2) INSTALL LOCK

Feed lock into door stile with bolt extended and secure with screws provided. (Leave screws untightened until face plate is fitted for correct positioning).

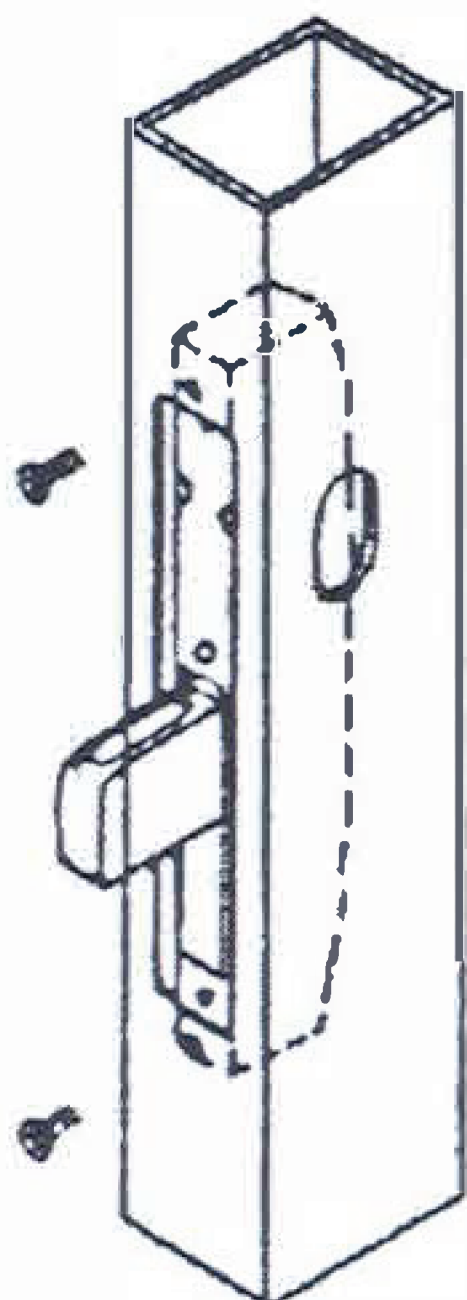


### (3) FIT CYLINDER/TURN KNOB

Fit cylinder to lock and secure with retaining screw — push on cylinder escutcheon.

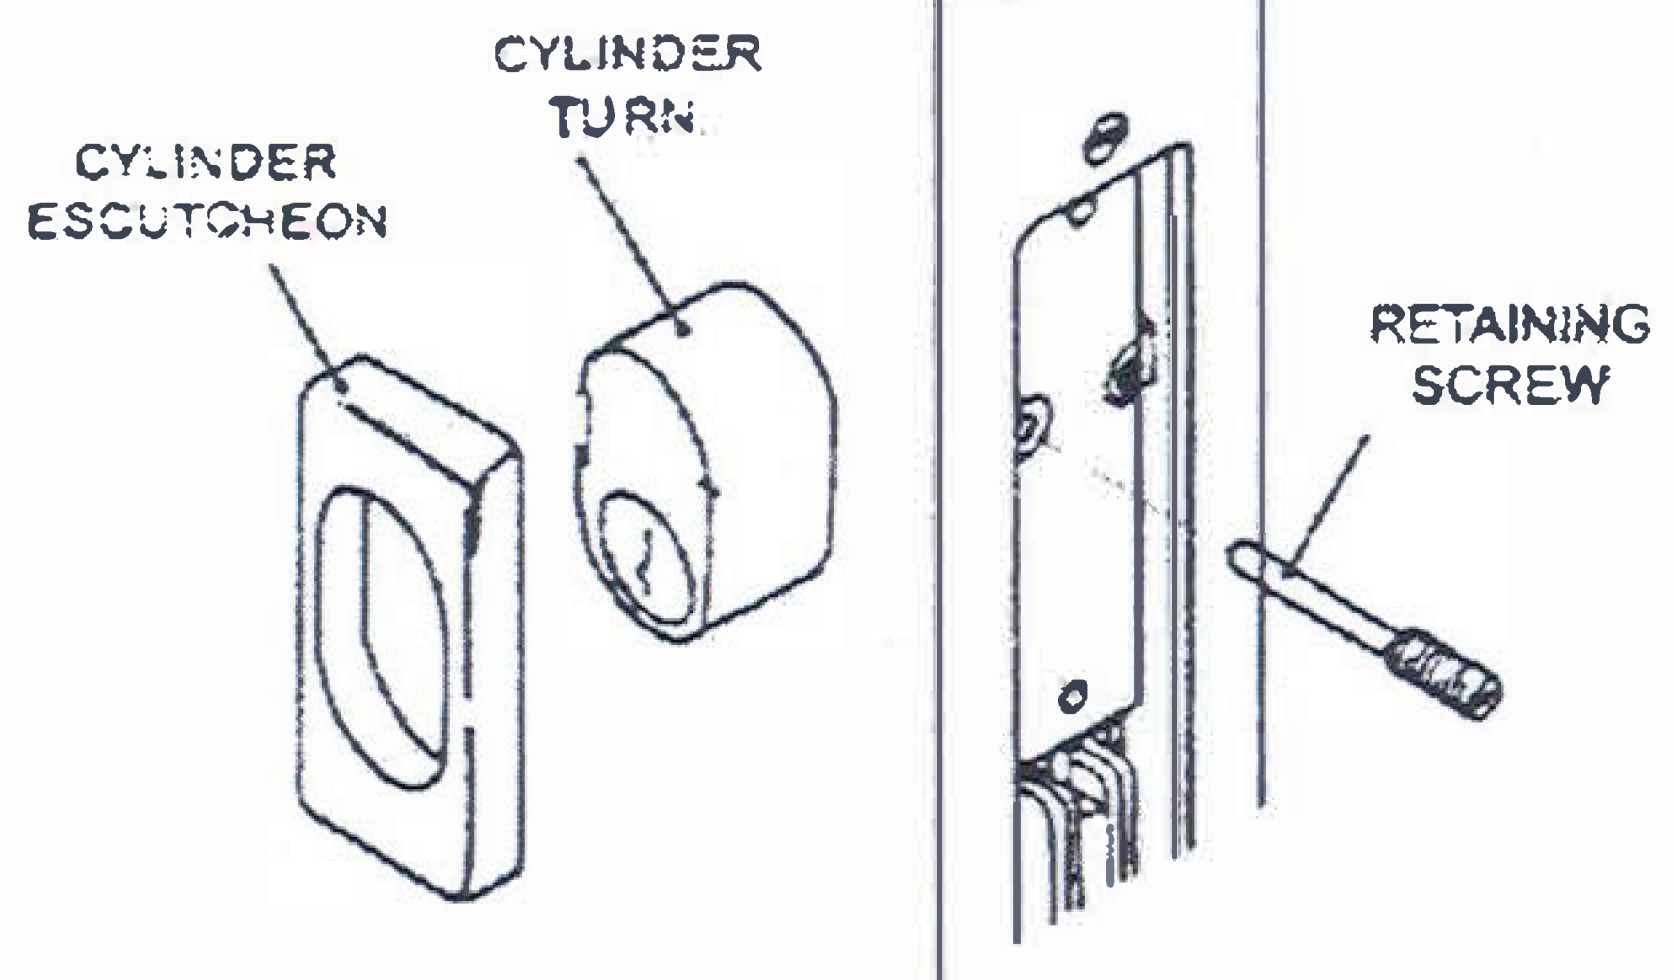

### (4) ATTACH FACE PLATE


Attach face plate to lock body with 3 screws supplied. Tighten top and bottom mounting screws.

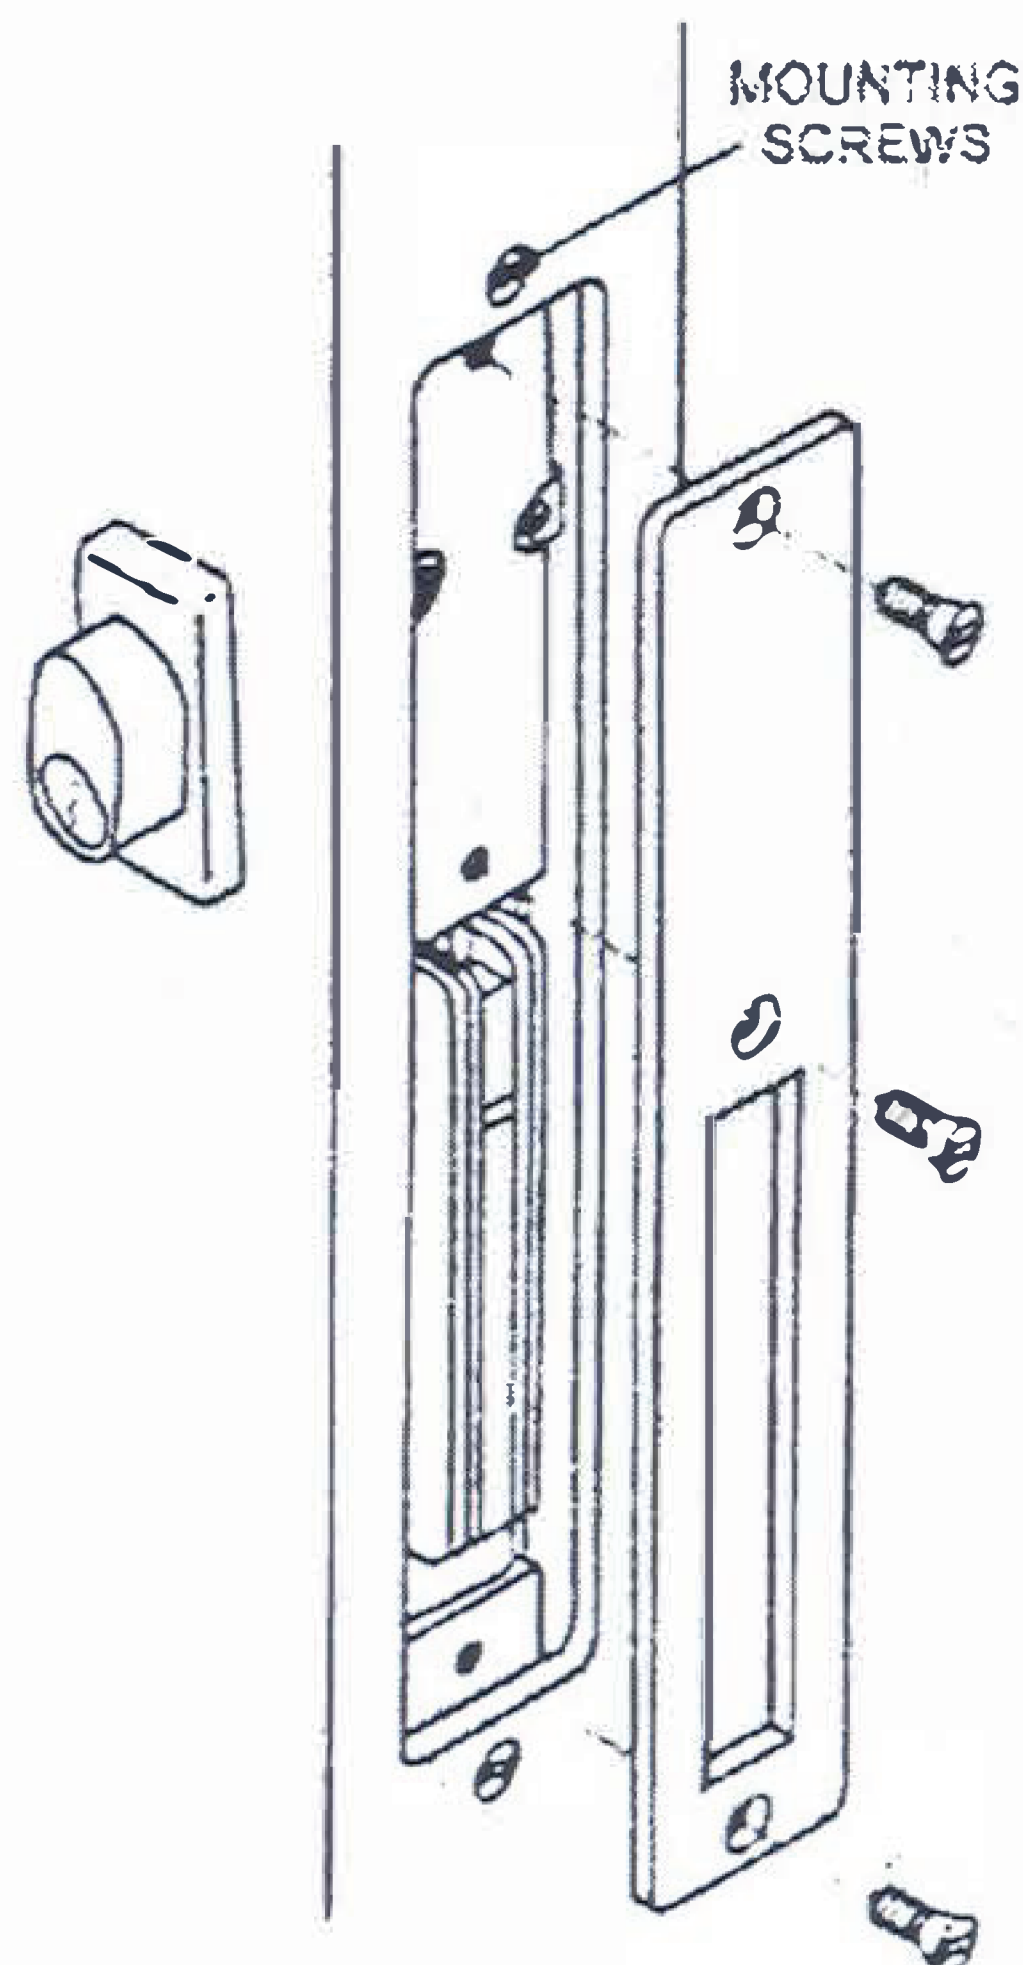




# (5) STRIKE

A. FOR STANDARD THROW BOLTS: Cut a hole in the door jamb to dimensions shown. Use 67mm dimension for 29mm bolt throw. Use 72mm dimension for 37mm bolt throw.

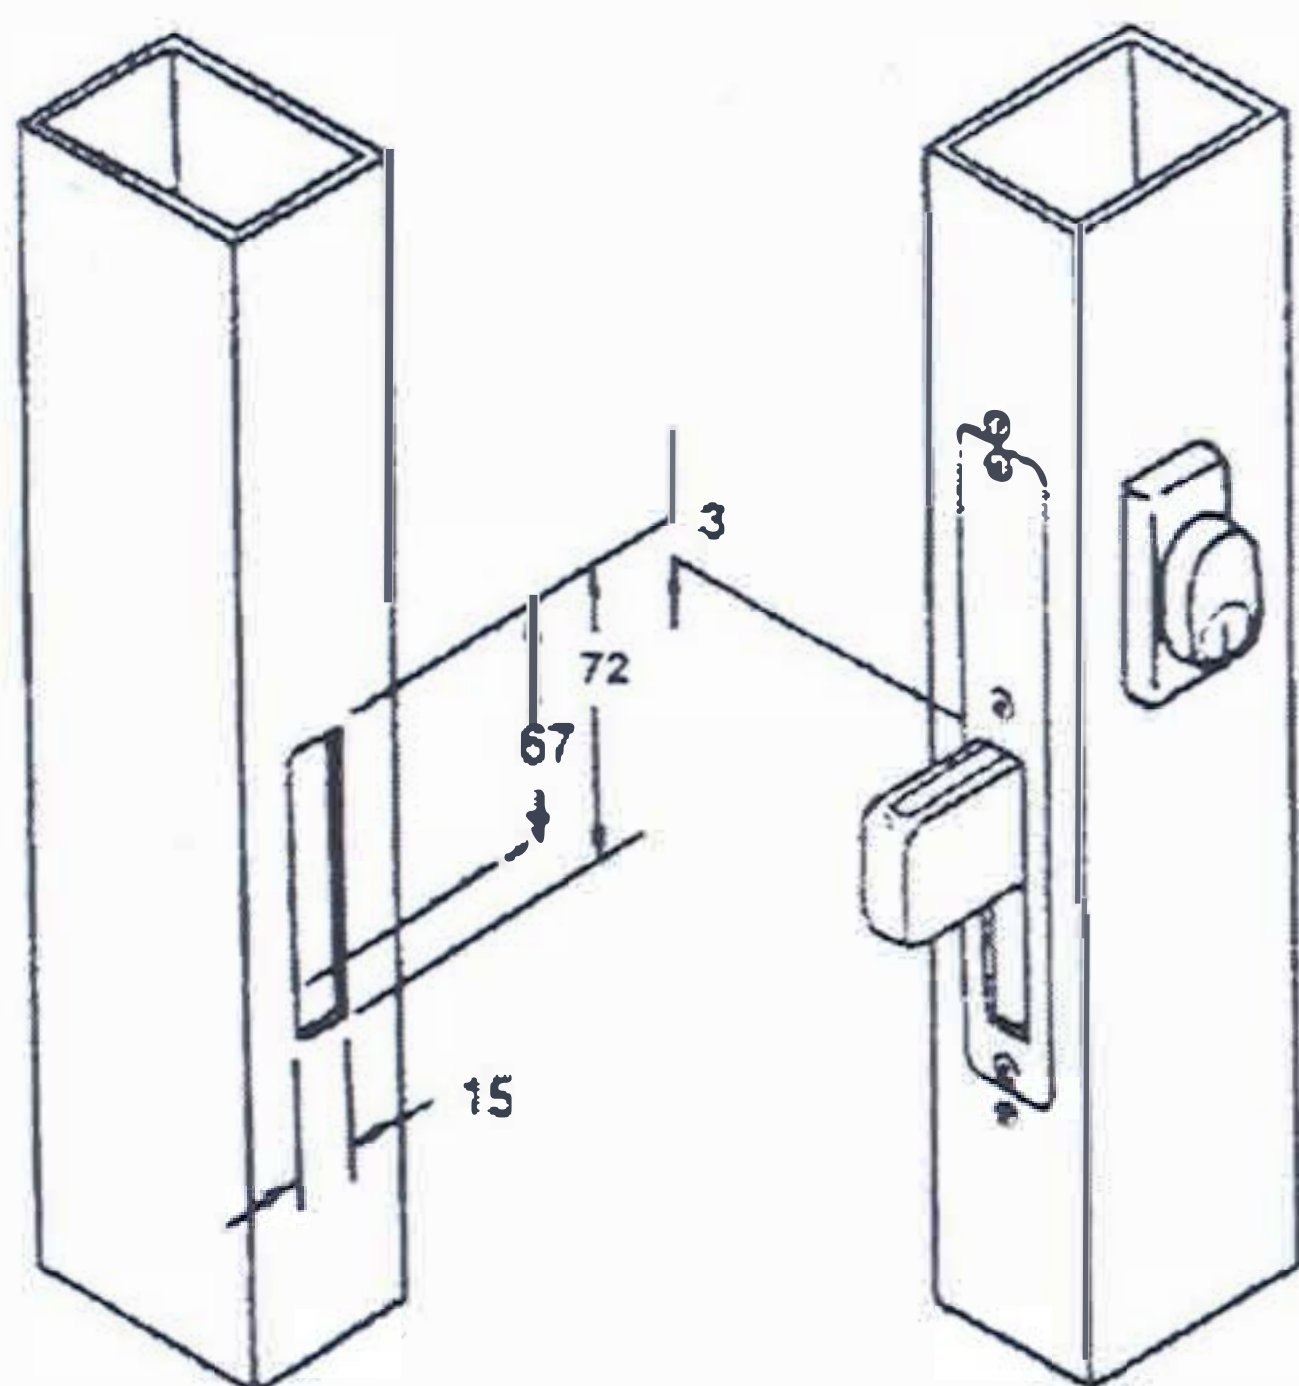

B. FOR SLIDING DOOR HOOK BOLT: Cut opening in door jamb to suit strike plate. Drill holes as shown. Fit strike assembly into door jamb and secure with screws. Attach strike cover plate.

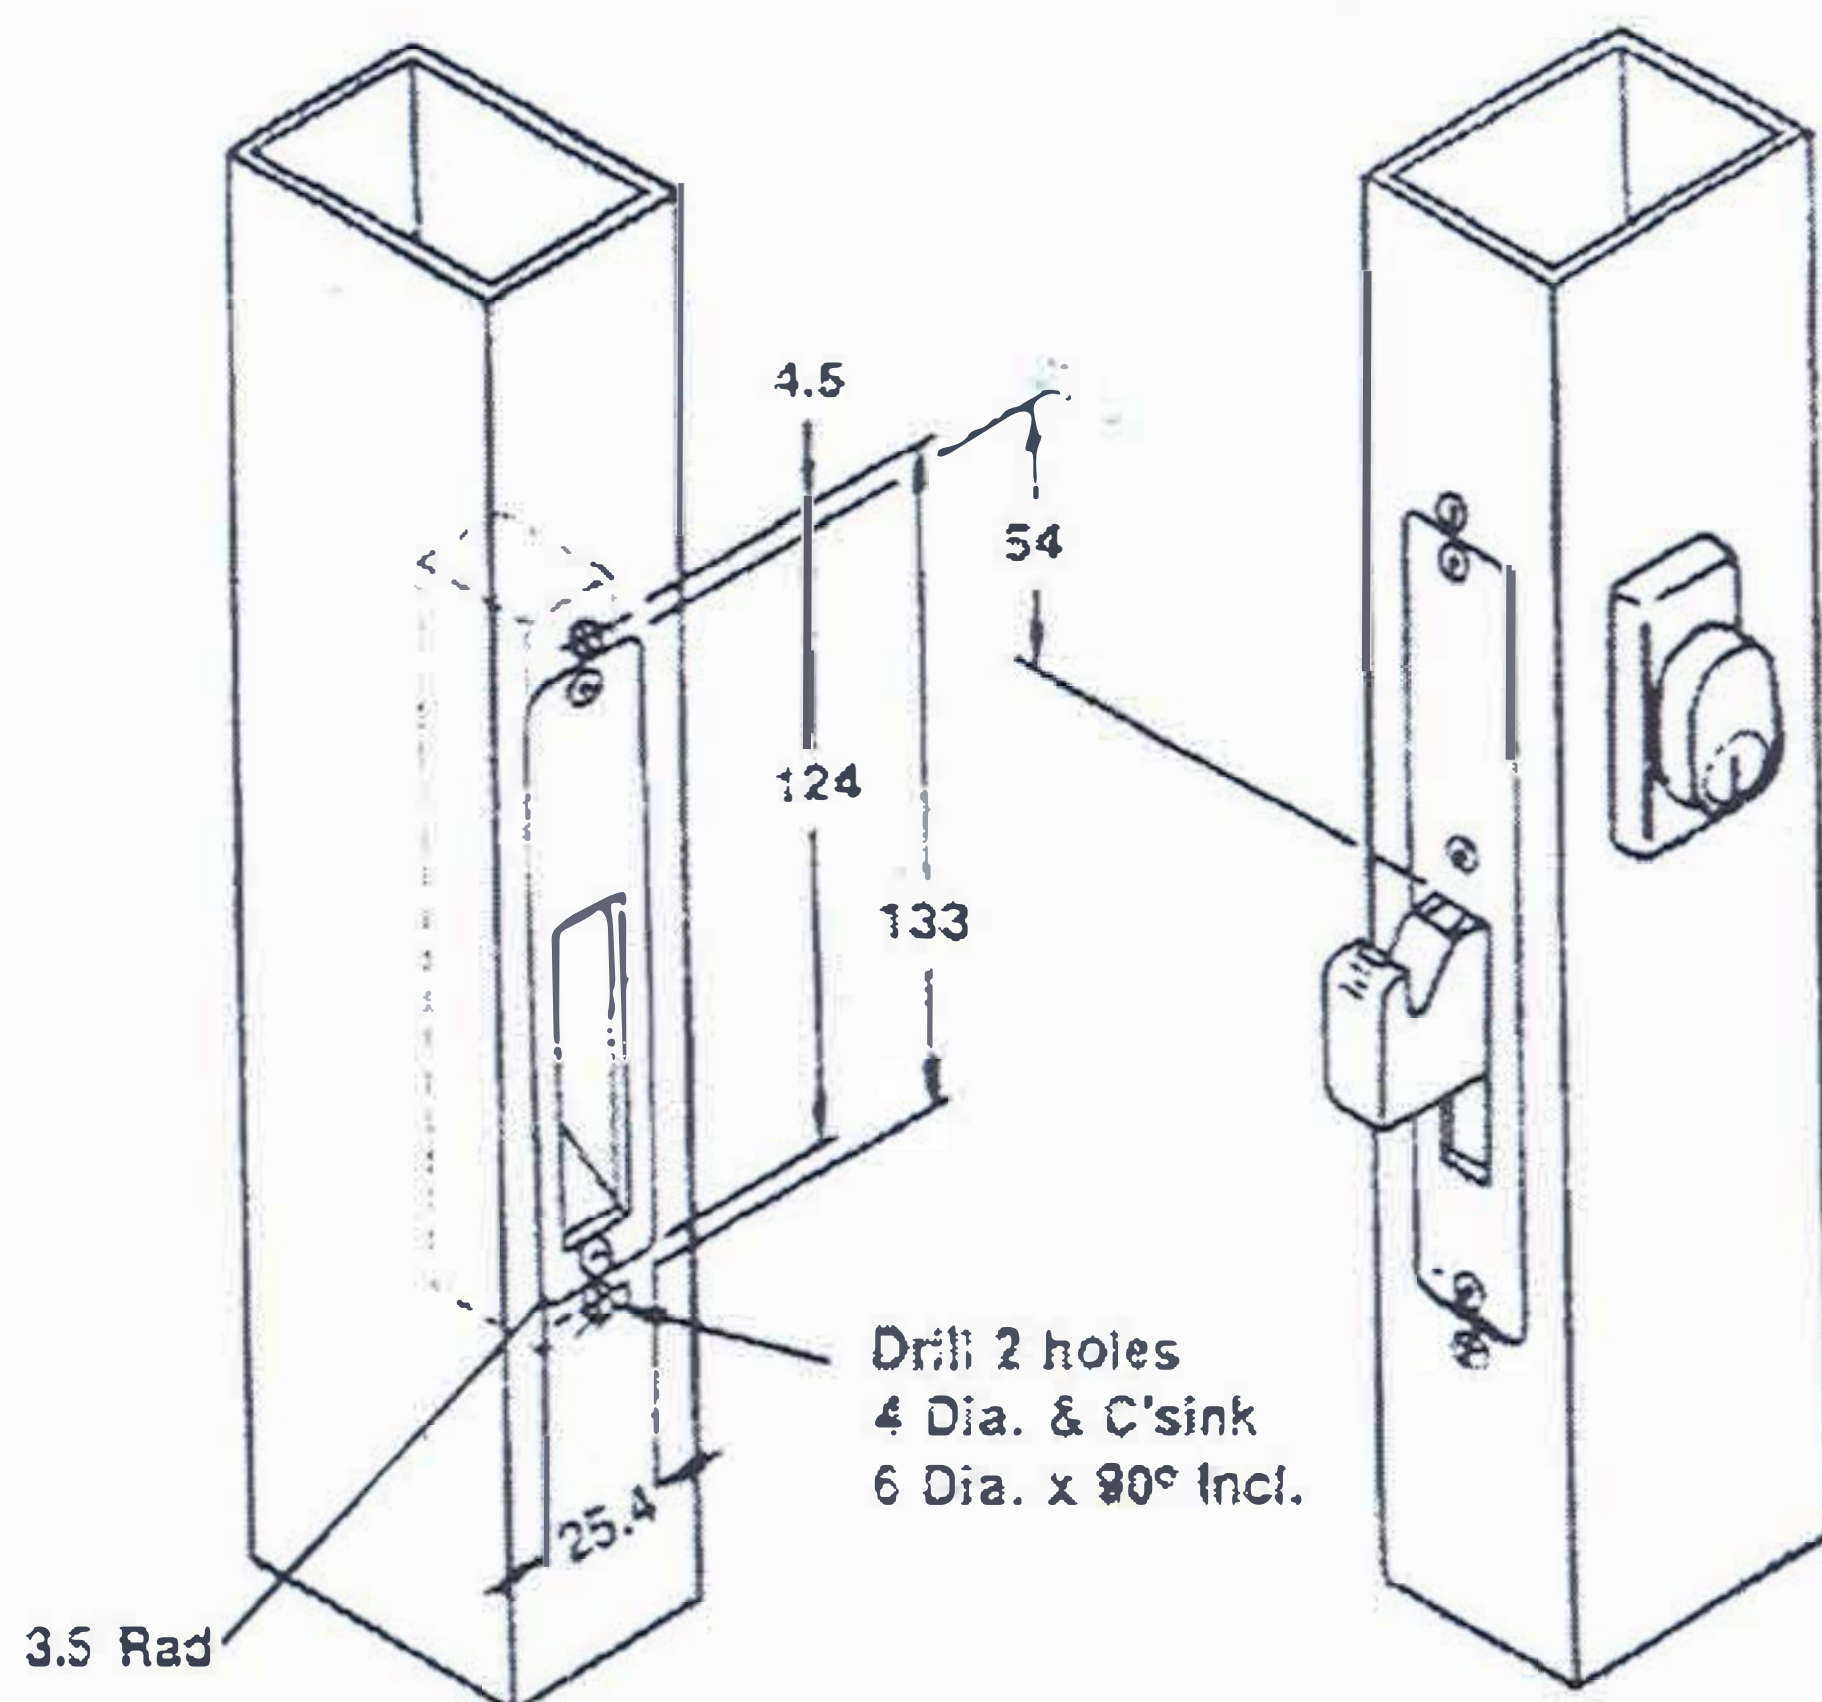

(7) CHECK OPERATION OF LOCK  
Lock must operate easily and throw bolt should engage strike freely.

# (6) LEVER HANDLE

Attach lever handle assembly with 2 C'sunk head screws supplied.

