



Prepare Door

Prepare door to suit desired lock function.

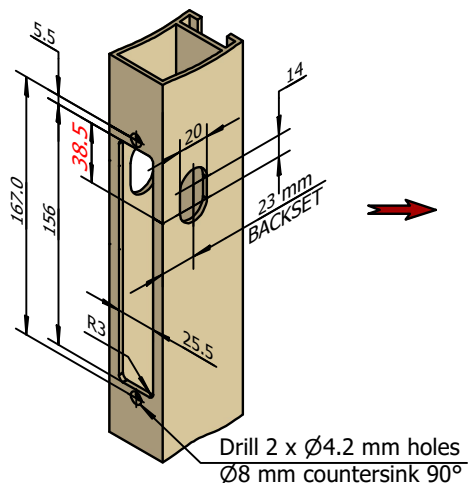


Install Lock

Extend Bolt before inserting lock into door cavity. This will give the installer something to hold onto while screwing in the mounting Screws.

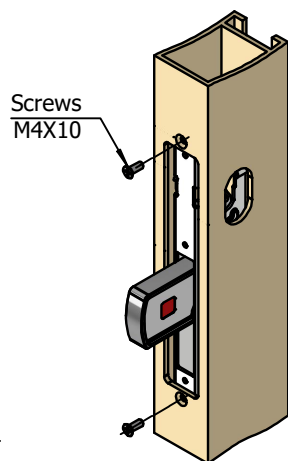


Fit Accessories

Turn Knob and Cylinder are installed into lock body and secure with Retaining Pins. Install cylinder Escutcheons. If you need to remove its cover, insert two small screwdrivers into its grooves and pry outward as figure.

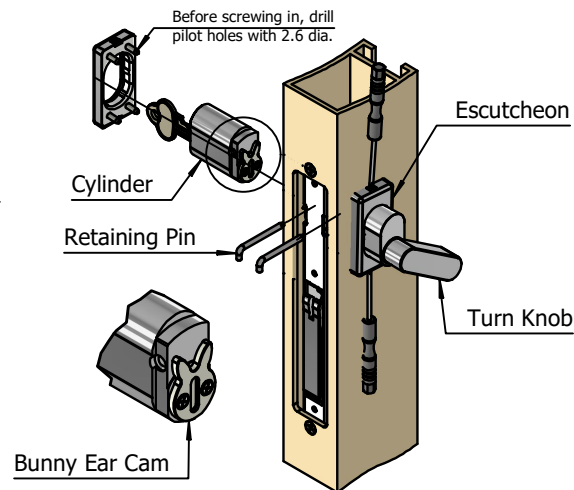


Install Face Plate

Use 3 Screws supplied to secure Face Plate. Check the lock function for both sides of door.

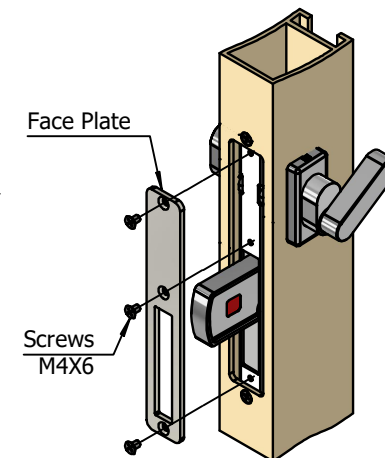


Standard Bolts Strike (For 590ML-QD-22B, -36B)

Use dimensions supplied to cut hole in door jamb or second door leaf if installing on double doors. Check operation of the door.

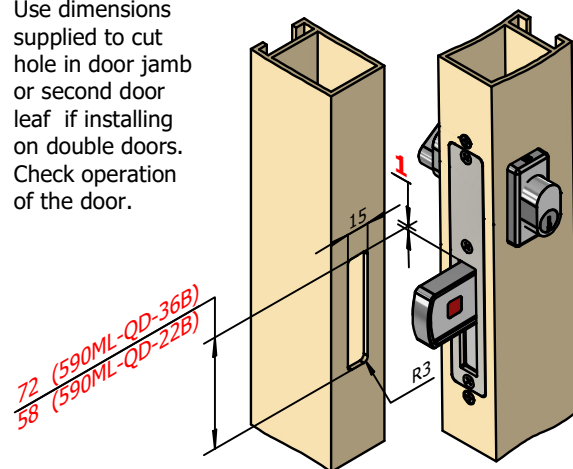


Sliding Doors Strike (For 590ML-QD-28HK)

Use dimensions supplied to prepare door with cut out to suit Strike Plate. Note: Installing Strike be carefully to hold the strike box while mounting to door as it can fall into the door stile cavity. Check operation of the sliding door.

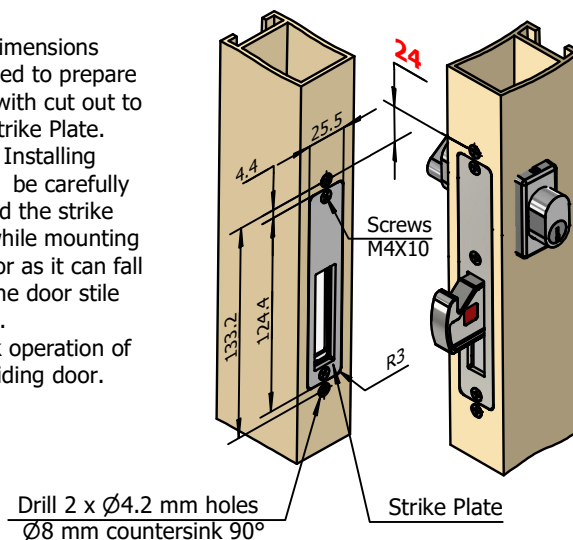

Bolt Replacement (If required)


When removing the Bolt, it is necessary to ensure that its position is in the drooping state.
1. Remove the Retaining Ring.
2. take out the Shaft Pin.
3. slightly rotate the Bolt, then the Bolt can be removed.
The steps for installing the Bolt that are required are the opposite of those for removing the Bolt.

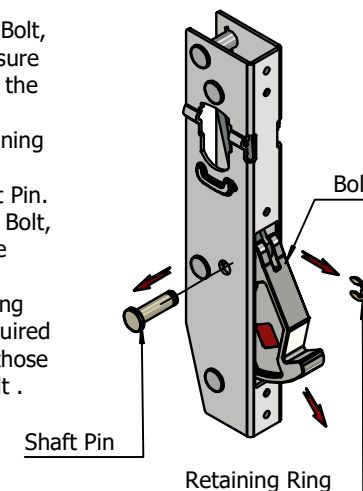

TBR-QD-22B, 36B, 28HKB INSTRUCTION FOR TIMBER DOOR


Prepare Door

Prepare door to suit desired lock function.

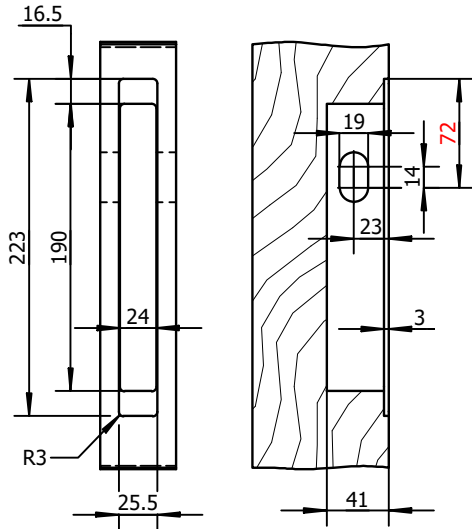


Install Lock

Extend Bolt before inserting lock into Door cavity. This will give the installer something to hold onto for next installation step.

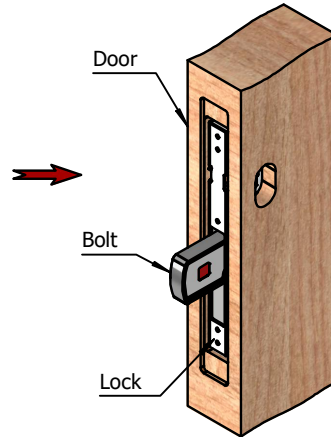


Fit Accessories

- Turn Knob and Cylinder are installed into Lock.
- Secure with Retaining Pins supplied.
- Install cylinder Escutcheons. **If you need to remove its cover, insert two small screwdrivers into its grooves & pry outward.**

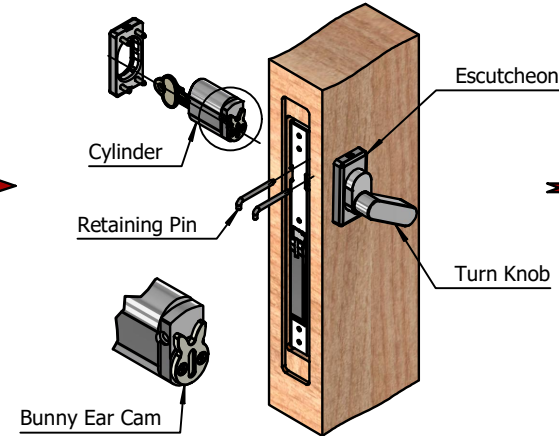


Install Face Plate

- Use 3 Screws supplied to secure Face Plate.
- Fix Face Plate with 2 self-tapping Wood Screws.
- Check the lock function for both sides of door.

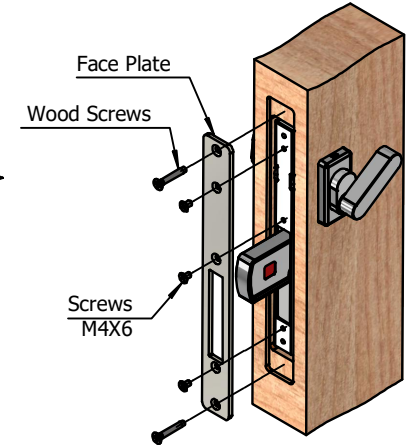

Standard Bolts Strike (For TBR-QD-22B, -36B)

- Use dimensions supplied to cut hole in Door Jamb.
- Fix Strike Plate to it with 2 self-tapping Wood Screws.
- Check operation of the door.

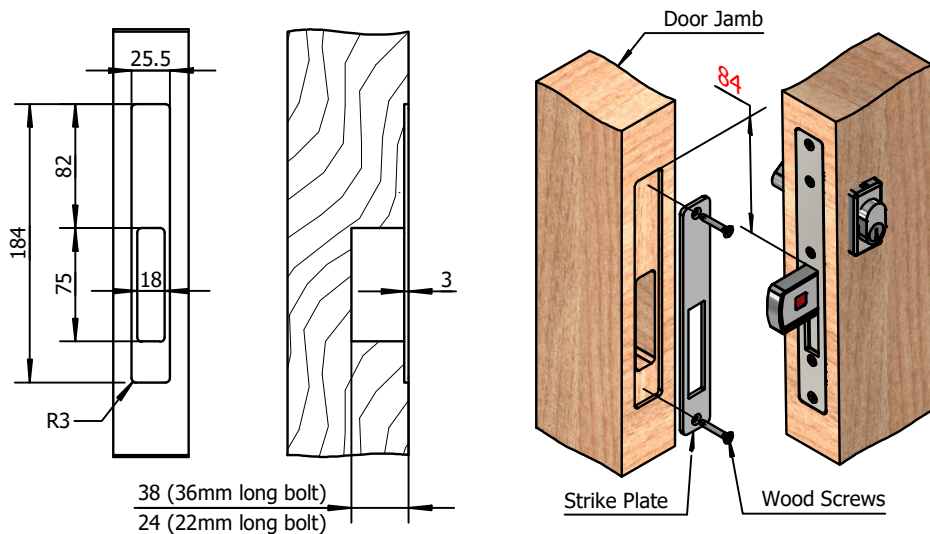

Sliding Doors Strike (For TBR-QD-28HKB)

- Use dimensions supplied to prepare door with cut out to suit Strike Box and Plate.
- Fix Strike Plate to door jamb with 2 self-tapping Wood Screws.
- Check operation of the sliding door.

