





Door Viewer 'SuperViewer' Series

1.

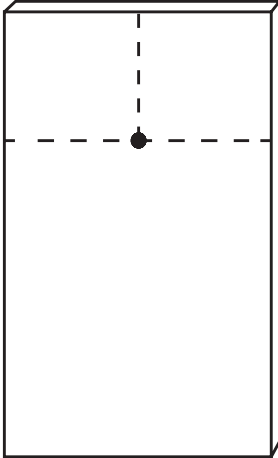

From the outside of the door, measure and mark the centre point at eye level.


2.

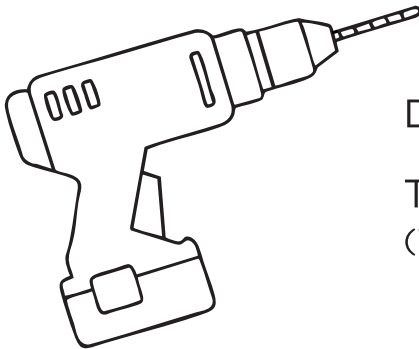

Drill a pilot hole through the door.

Then drill a Ø14mm hole from both sides.
(This helps minimise the risk of damage to the door.)

3.

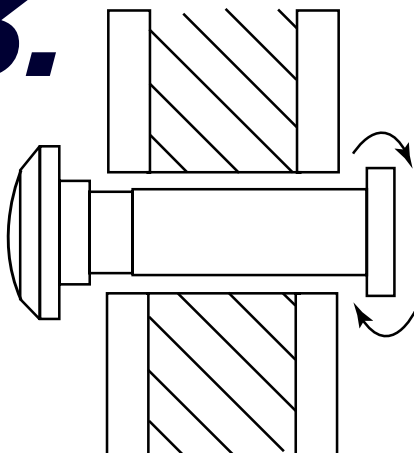

Unscrew the viewer into two parts.

Insert the external section from the outside of the door and the internal section from the inside.

Screw both parts together until tight and flush with the door surfaces.