




LEG-TON FURNITURE PLATE INSTRUCTIONS


FURNITURE HANDING

Verify correct handing of furniture on the door required. Lever should rotate downwards.

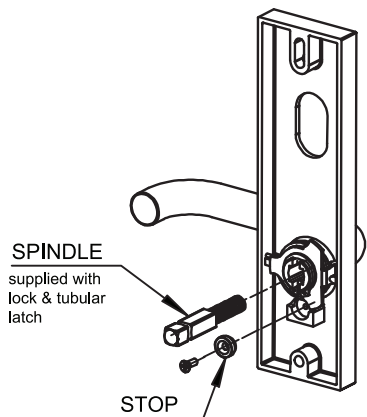



INSTALLATION OF FURNITURE

1. Remove lock from door.
2. Place template in correct alignment, and mark hole centres accurately and drill holes required.
3. If required cut screws to length as indicated, deburr end of cut screw.

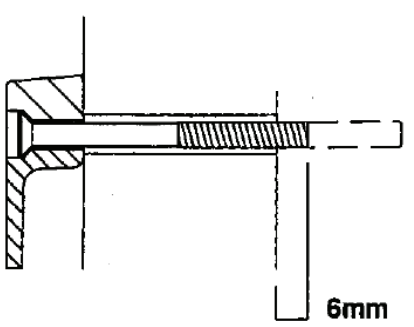


LOCKS WITH TURN KNOB


1. Mark and cut connecting bar as shown.
2. Turn knob to be in vertical position when unlocked.

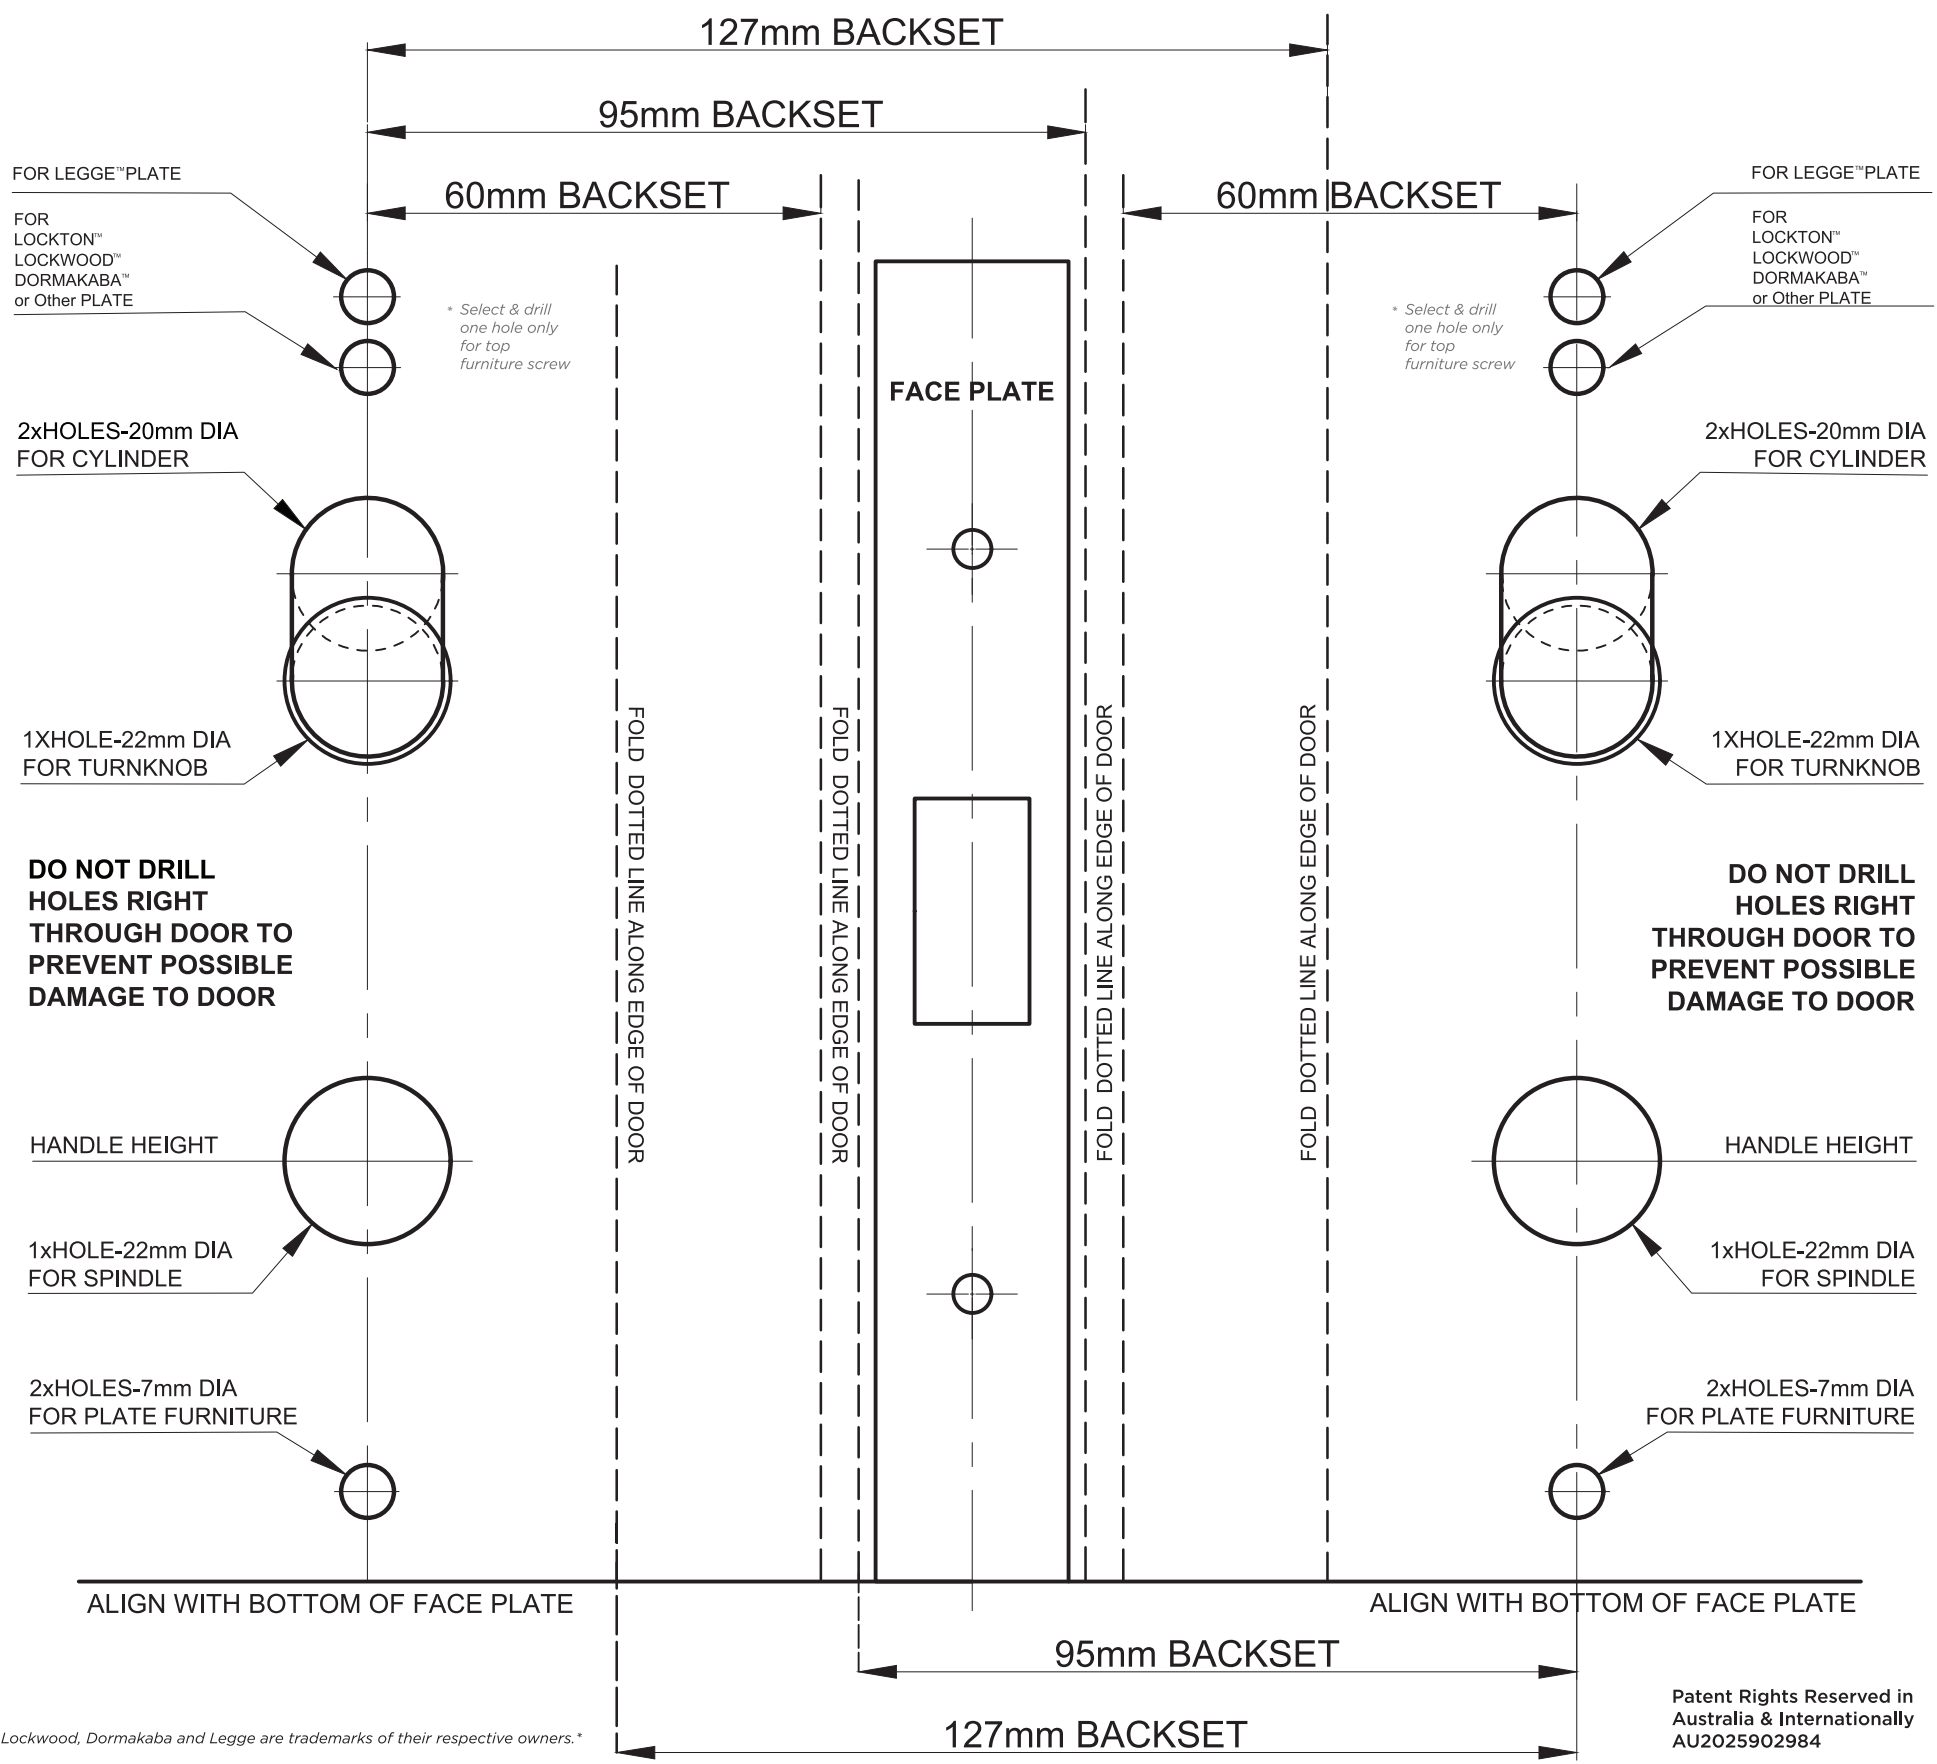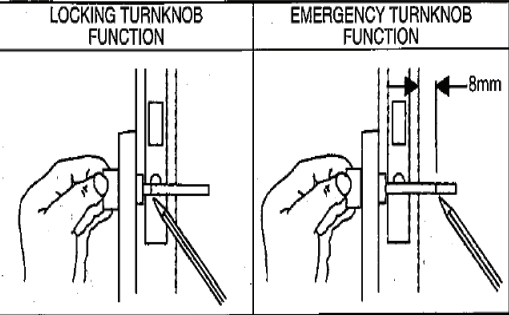

LEG-TON SERIES FURNITURE

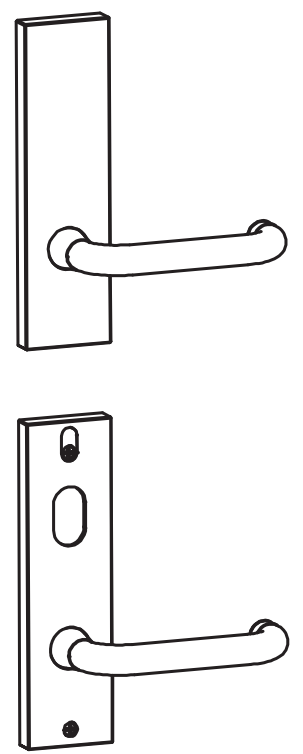

This is a LEG-TON template for installation of LEG-TON Wide stile furniture /60- 95-127 mm backset furniture when used with standard Australian mortice locks. Before drilling holes, check that they will suit lockset and furniture to be fitted. For all other details refer to lock mounting instructions.

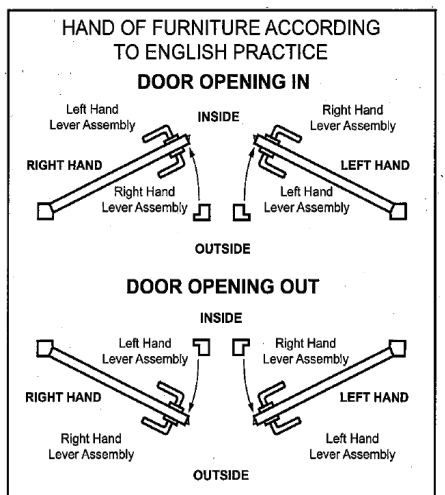

Patent Rights Reserved in Australia & Internationally AU2025902984

Lockwood, Dormakaba and Legge are trademarks of their respective owners.*