



# Kroll 1 LED Light Installation Instructions

Code	Description
5505091-12v-WH-3K	Kroll 1-12v-WH-3K
5505091-12v-WH-5K	Kroll 1-12v-WH-5K
5505091-12v-BK-3K	Kroll 1-12v-BK-3K
5505091-12v-BK-5K	Kroll 1-12v-BK-5K
5505091-240v-WH-3K	Kroll 1-240v-WH-3K
5505091-240v-WH-5K	Kroll 1-240v-WH-5K
5505091-240v-BK-3K	Kroll 1-240v-BK-3K
5505091-240v-BK-5K	Kroll 1-240v-BK-5K

CUTOUT WITH CANISTER  
Ø58mm

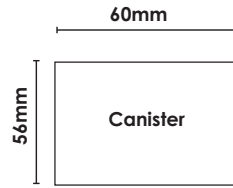

CUTOUT WITHOUT CANISTER  
Ø54mm

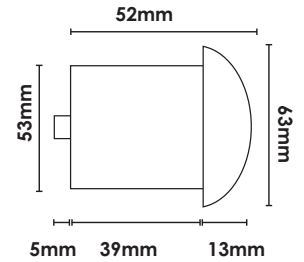

## Important Safety Issues:

- This product must be installed by a professional, licensed electrician according to AS/NZ 3000.
- Ensure power supply is switched off before installation
- Modifications of this product will void any warranty
- Vencha Lighting does not take responsibility for wrong installation or incorrect use.

## Steps for Installation:

1. Turn off power, make sure circuit is free of voltage.
2. Make a hole to suit fitting being installed. Please use dimensions provided.  
\*Please note cut out will vary depending on installation method, with or without cannister.
3. Fitting can be installed in wall, inground or in deck.  
\*Adequate drainage required if installed inground or deck.
4. Connect fitting to appropriate power source (\*240v or 12v DC depending on model)
5. If connecting multiple fittings, wiring must be done in parallel.
6. Once fitting connected, insert fitting into hole, making sure fitting is stable.
7. Finish installation.
8. Turn power back on and test fitting operates correctly.

