

NEW MVT2405 Operating Instructions

(A) Two ways to set up the time & hourly striking:

(I) Easy Setting of Hourly Striking

1. Take out the battery and set the time at around 5:50 by turning the minute hand.
2. Insert the battery.
3. Press "RESET" button and the clock strikes 5 times by default.
4. Turn the minute hand CLOCKWISE to set the correct time.

(II) Setting by RESET & SET button


1. Insert the battery and turn the minute hand CLOCKWISE to set the correct time. Whenever the minute hand passes 12 o'clock position, the clock strikes. It is normal and can be ignored.
2. Press "RESET" button and the clock strikes 5 times by default in spite of the time shown by the hands.
3. Press "SET" button to decide the strike according to the following time setting table.

No. of Press	Strike
1	6:00 a.m./p.m.
2	7:00 a.m./p.m.
3	8:00 a.m./p.m.
4	9:00 a.m./p.m.
5	10:00 a.m./p.m.
6	11:00 a.m./p.m.
7	0:00 a.m./ 12:00 p.m.
8	1:00 p.m./a.m.
9	2:00 p.m./a.m.
10	3:00 p.m./a.m.
11	4:00 p.m./a.m.
0 (default)	5:00 p.m./a.m.

Note:

- a) Do not turn the hour hand with fingers or it will cause malfunction of the movement.
- b) Do not turn the minute hand COUNTER-CLOCKWISE or the electronically programmed hourly striking strikes incorrectly.
- c) The half hour striking will not function during the first hour after time setting. After that, it works normally. This is not a malfunction.

(B) Function key

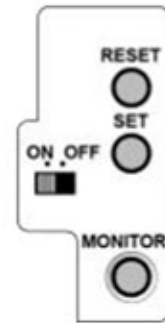

a) MONITOR

To demonstrate the hourly striking

b) RESET

When "RESET" button is pressed, the clock would strike 5 times by default.

c) ON/OFF

Hourly Striking ON/OFF switch

d) SET

When "SET" button is pressed, the hourly striking program will count up for one hour. Once the button is pressed, the half hour striking will not function during the first hour.