

present time



refill can sprays



starting time



Service days



HOURS per day
8, 10, 12, 16, 24



alarm ON/OFF



low battery icon

4-9 **WEEK** *short Press* to select the day of the week
1/Mon 2/Tue 3/Wed 4/Thur 5/Fri 6/Sat 7/Sun

long Press & Hold to select Weekly Working Days

5 : Monday – Friday

6 : Monday – Saturday

7 : Monday – Sunday (factory setting)

* OFF days' sprays will automatically transfer back to working days, keep same D/S and shorten its interval between sprays

EASY-5 SMARTech Programmable Aerosol Dispenser


OPERATION MANUAL • MANUALE DI FUNZIONAMENTO

MODE D'EMPLOI • MANUAL DE OPERAÇÃO


MANUAL DE FUNCIONAMENTO

操作手册 • GEBRAUCHSANWEISUNG

A series

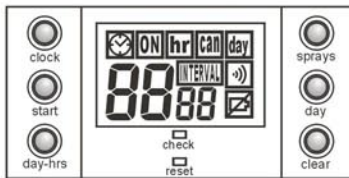

1. Display Indicator

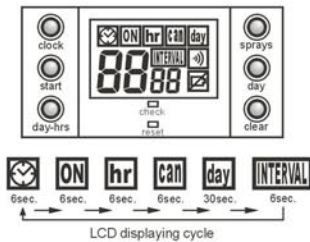

when **ON** blinks, the dispenser is at on-duty mode. Do not spray into eyes.

when **can** blinks, the dispenser setting is fully used, check and change refill. (refer to 4-4, 4-7-1)

when **day** blinks, the dispenser is at low-battery mode. (refer to 4-8)

when **audio** displays, the dispenser is at audio-on mode. (refer to 4-7-2)

2. Start







- 2-1 Open cabinet. Pull hinged cover down from top.
- 2-2 Press **RESET** to re-program dispenser after inserting a new alkaline battery(s).
- 2-3 Select the setting by Selection Keypads that you wish to customize.
- 2-4 Insert aerosol refill and close (lock) cover. (Can must lock securely into neck collar ring.)

Note! Do not insert aerosol can before inserting battery(s).
Do not RESET or spray into eyes.

3. Selection Keypads

- 3-1 **clock** local time
- 3-2 **start** daily ON time
- 3-3 **day-hrs** daily on-duty hours
- 3-4 **sprays** can spray numbers
- 3-5 **day** usage days
- 3-6 **clear** 3-6-1.. clear **can** and **day** counters
3-6-2.. audio on/off
- 3-7 **check** recall the settings
- 3-8 **reset** re-set to default setting
automatic 1 spray self-testing

5-1 Spray Interval Manu

can	day	hrs	interval	can	day	hrs	interval	can	day	hrs	interval
2000	8	03:36		8	02:53		8	02:24	45	8	02:24
	10	04:30		10	03:36		10	03:00			
	12	05:24		12	04:19		12	03:36			
	16	07:12		16	05:46		16	04:48			
	24	10:48		24	08:38		24	07:12			
	8	07:12		8	05:46		8	04:48			
	10	09:00		10	07:12		10	06:00			
	12	10:48		12	08:38		12	07:12			
	16	14:24		16	11:31		16	09:36			
	24	21:36		24	17:17		24	14:24			
	8	10:48		8	08:38		8	07:12			
	10	13:30		10	10:48		10	09:00			
2500	12	15:24		45	12	10:48		45	12	09:00	
	16	21:36		16	17:17	16		14:24			
	24	32:24		24	25:35	24		21:36			
	8	14:24		8	11:31	8		09:36			
	10	18:00		10	14:24	10		12:00			
	12	21:36		12	17:17	12		14:24			
	16	28:48		16	23:02	16		19:12			
	24	43:12		24	34:34	24		28:48			
	8	18:00		8	14:24	8		12:00			
	10	22:30		10	18:00	10		15:00			
	12	27:00		12	21:36	12		18:00			
	3000	16		36:00		75		16	28:48		75
24		54:00	24	43:12		24	36:00				
8		21:36	8	17:17		8	14:24				
10		27:00	10	21:36		10	18:00				
12		32:24	12	25:55		12	21:36				
16		43:12	16	34:34		16	28:48				
24		64:48	24	51:50		24	43:12				

Note: press **clear** to clear **can** and **day** counters after inserting new aerosol can

4. Setting

- 4-1 **CLOCK** press **clock** to program the local time at 24hr00-time-system eg. every 10 minutes per press as 0800, 0810, 0820 ... etc.
- 4-2 **ON START** press **start** to program the desired on-duty time eg. every 1 HOUR per press as 22, 23, 00, 01, 02 ... etc.
Note! when **ON** blinks, the dispenser is at on-duty mode.

- 4-3 **DAY-HRS** press **day-hrs** to select the desired daily on-duty hours **day-hrs** option: 8, 10, 12, 16, 24 hours

- 4-4 **SPRAYS** press **sprays** to select spray application of the can (down counter) (refer to 4-7-1)
spray option: 2000, 2500, 3000, 3400, 6000, 9000 sprays
note: when **can** blinks, check and change the refill

• one-long-beep warning tone will be sounded for 24 hours
(to mute the warning tones, refer to 4-7-2)

- 4-5 **DAY** press **day** to select the desired service days (down counter) day option: 15, 30, 45, 60, 75, 90 days

- 4-6 **INTERVAL** automatic count internally in accordance to above setting (refer to 4-4)

- 4-7 **CLEAR** 4-7-1 press **clear** to clear existing **sprays** and **day** counters

4-7-2 Audio/Mute

- when **audio** displays, the dispenser is at audio-on mode
- press and hold **clear** for 3 seconds to activate **silent mode**
- **note:** during **silent mode**, keypads tones, warning tones for refill-change and low-battery will be mute as well

- 4-8 **day** When the battery(s) is running out of power and only few minutes of operation remain, **day** blinks and 2-short-beep warning tone will be sounded until a new battery(s) is replaced.
(to mute the warning tones, refer to 4-7)

- 4-9 **CHECK** press **check** as a shortcut to recall dispenser's existing working status






- 4-10 **RESET** press **reset** to factory original value

default setting



5-2 Spray Interval Manu

can	day	hr	interval	can	day	hr	interval	can	day	hr	interval
 3400	8	02:07		8	01:12			8	00:48		
	10	02:39		10	01:30			10	01:00		
	12	03:11		12	01:48			12	01:12		
	16	04:14		16	02:24			16	02:36		
	24	06:21		24	03:36			24	02:00		
	8	04:14		8	02:24			8	01:36		
	10	05:18		10	03:00			10	02:00		
	12	06:21		12	03:36			12	02:24		
	16	08:28		16	04:48			16	03:12		
	24	12:42		24	07:12			24	04:48		
	8	06:21		8	03:36			8	02:24		
	10	07:56		10	04:30			10	03:36		
 6000	12	09:32		12	05:24			12	03:36		
	16	12:42		16	07:12			16	04:48		
	24	19:04		24	10:48			24	07:12		
	8	08:28		8	04:48			8	03:12		
	10	10:33		10	06:00			10	04:00		
	12	12:42		12	07:12			12	04:48		
	16	16:56		16	09:36			16	06:24		
	24	25:28		24	14:24			24	09:36		
	8	10:35		8	06:00			8	04:00		
	10	13:14		10	07:30			10	05:00		
	12	15:53		12	09:00			12	06:00		
	16	21:11		16	12:00			16	08:00		
 9000	24	31:46		24	18:00			24	12:00		
	8	07:12		8	07:12			8	04:48		
	10	09:00		10	09:00			10	06:00		
	12	10:48		12	10:48			12	07:12		
	16	14:24		16	14:24			16	09:36		
	24	21:36		24	17:36			24	12:00		

Note: press **clear** to clear **can** and **day** counters after inserting new aerosol can