

POOL LAB 3 BAG REAGENT SET - Part # 55703 *

Manufactured by Poolpower Australia Pty Ltd ABN 57 089 882 520
Factory 1b, 39-45 Susan Street, Eltham, Victoria, Australia, 3095
Email: service@poolpower.com.au Website: www.poolpower.com.au

WARNING: Protective eye equipment and gloves must be worn when changing reagent bags.
If contact with reagent occurs please follow instructions on bag for treatment.

Note: Each bag will have different treatment advice.

INCLUDED IN BOX



REAGENT BAGS X 3



BUTTERFLY CONNECTORS X 3

WHITE
Free Chlorine Reagent 1
BLUE
Free Chlorine Reagent 2
RED
pH Reagent



INSTRUCTION SHEET X 1


STEPS 2/3/4 ARE ONLY DONE ON FIRST INSTALLATION OF BUTTERFLY CONNECTIONS (OR IF EXISTING CONNECTIONS ARE DAMAGED)

1. SWITCH CHROMATYZER POWER OFF



AND UNHOOK BAGS

2. PULL TO REMOVE REAGENT FEED TUBE

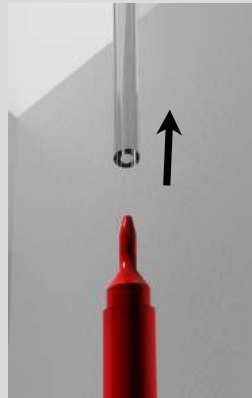

3. CUT APPROX. 5mm OFF REAGENT LINE TUBE END




4. PUSH REAGENT LINE ONTO SMALL END (repeat for all reagent lines)



STEP 5 IS ONLY DONE IF
BUTTERFLY CONNECTIONS
PREVIOUSLY INSTALLED

5. REMOVE CONNECTOR FROM EMPTY BAG

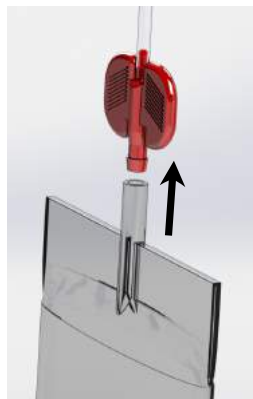


6. HOLD NEW BAG INVERTED



7. CUT OFF TUBE END. DO NOT SQUEEZE BAG!

*. Hold away from face and body

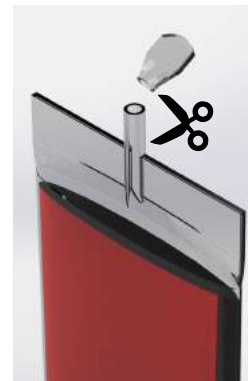

8. PUSH CONNECTOR INTO OPEN TUBE



9. FIT BAGS ONTO CORRECT HOOK AND SWITCH CHROMATYZER POWER ON. CHECK ALL REAGENT LINES HAVE PRIMED