


Mecca Care

32mm T Bar Grab Rail

1100x750mm

Twin Shower Set


Nero

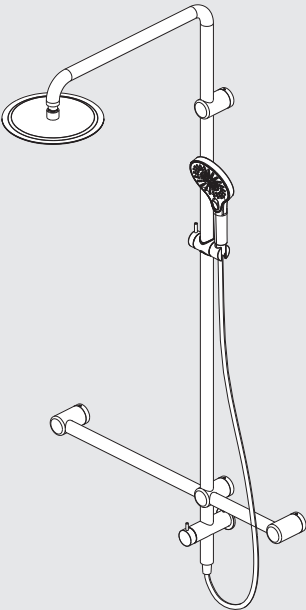

Versions:202506



Drawing

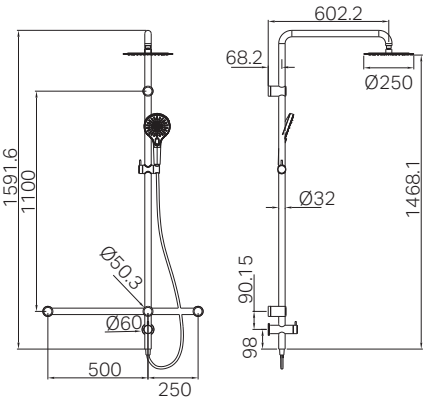

Specifications

Watermark License

WM-060093

Temperature Rating

Min 1 °C-Max 75 °C

Pressure Rating

Min 150kpa - Max 500kpa

Finish & SKU

Chrome
NRCS008CH

Brushed Bronze
NRCS008BZ

Graphite
NRCS008GR

Matte Black
NRCS008MB

Brushed Gold
NRCS008BG

Brushed Nickel
NRCS008BN

Packaging Includes

- 1x Hand Shower
- (Built - In Check Valve)
- 1x Shower Head
- 1x Shower Arm
- 1x Shower Rail
- 1x 1.5m PVC Hose
- 2x Horizontal Grab Rails
- 1x Installation Kits

*Dimensions are nominal measurements only.

**Dual-check valve pre-installed.

WARNINGS:

- These rails are designed to be mounted onto wall studs or masonry walls. Installation is recommended to be completed by qualified trades person who complies with the AS 1428.1-2009 design for access and mobility standard.
- It is recommended rail location is determined by a qualified occupational therapist or trained professional to the AS 1428.1-2009 standard. Correct installation is required to ensure safe, long term operation. Incorrect mounting can result in reduced capacity of the rail which can result in injury to user and damage to the wall.

FEATURES:

- Australian owned and designed.
- The horizontal rail can be offset to either side of the rail and shortened during installation to suit your bathroom.
- 150kg capacity for all 25mm and 32mm diameter grab rails.
- 32mm diameter rails are approved for standard AS1428.1 requirements in DDA bathrooms.
- Gun metal, brushed gold and brushed bronze colours are PVD coated for long term durability.

MAINTENANCE AND CARE:


- Regularly check the shower system and all connections for signs of wear or leaks.
- Clean all shower components with mild soapy water to maintain their appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.
- Descale the showerhead, hand shower, and other components periodically to prevent mineral buildup, which can affect water flow and performance.
- Inspect and replace any worn-out parts, such as seals or washers, to ensure the longevity and efficiency of the shower system.
- Ensure all moving parts, such as adjustable brackets or sliding rails, are functioning smoothly and are properly lubricated if necessary.

Installation Instruction

GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that your plumbing installation conforms to the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the shower. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the shower components.
- Ensure that all outlets used for personal hygiene deliver water at a safe temperature in accordance with regional regulations.
- Verify that the water pressure is within the recommended range for the shower to function properly.


1.

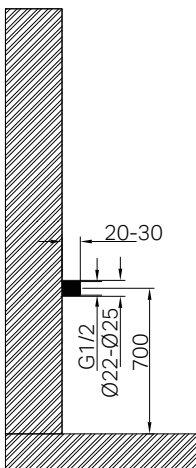

Ensure that the G1/2 outlet thread is at the correct length, trim the outlet if necessary to achieve the desired fit. The recommended height for the water inlet is 700mm from the finished floor surface.

Apply the G1/2 water outlet connection with Teflon tape to ensure a watertight seal.

2.

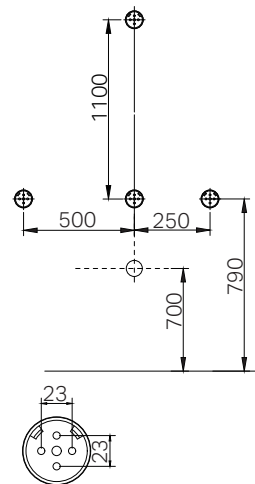


Locate the wall studs and ensure that at least one bracket is anchored into a stud for secure installation.

Position the wall seal or mounting bracket at the specified height, centered over the stud.

Mark the hole positions on the wall using the diagram above as a reference.

3.

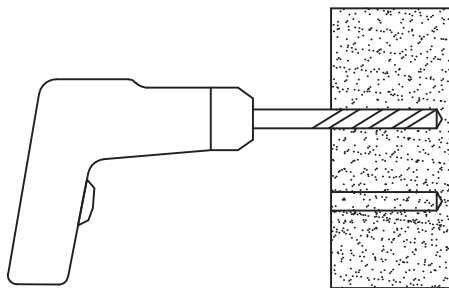


Wall Plugs 

Drill pilot holes into the wall stud to a depth of approximately 60mm, ensuring the holes are suitable for the mounting screws (and wall plugs if necessary).


Tip: Use a 3mm drill bit for screws into timber, or an 8mm drill bit if using wall plugs.

4.

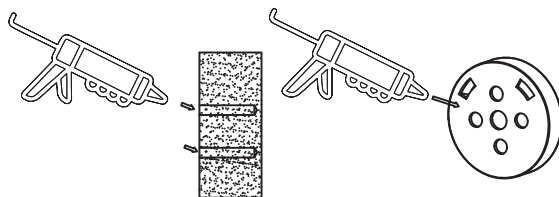

Apply a small amount of silicone to the back of the mounting bracket, focusing on the area around the screw holes.


5.

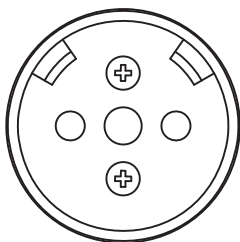

Install the mounting brackets by securing them to the wall with screws.


Tip: Ensure you use the appropriate mounting screws for the specific wall stud material. The provided screws are designed for timber wall studs.

6.



Insert shower arm into shower rail, firm it with grub screw, do not over tighten the screws.

7.

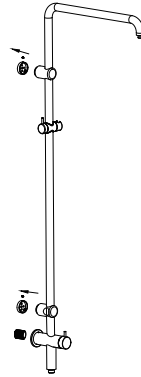


Screw the adapter onto the prepared outlet thread. Slide the backplate onto the diverter and attach the diverter to the water inlet and secure it in place.

Mount the shower brackets onto the wall at the desired height along the shower rail.

Once both brackets are securely mounted, tighten all the grub screws on the shower rail and the diverter to ensure everything is firmly in place.

8.

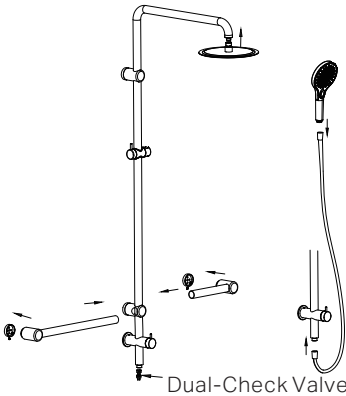

Slide the horizontal grab rails into the end brackets.

Push the assembly onto the wall-mounted brackets, ensuring they are properly aligned.


Secure the horizontal grab rails by tightening the grub screws on both ends.

Attach the hose to the hand shower. Connect the other end of the hose to the fitting on the end of shower rail.

Thread the overhead shower head onto the shower arm, ensuring a tight connection.

Tip:
The horizontal rail can be cut to a shorter length. Please deburr the cut end with a file or grinder. Reinsert the modified rail into the end bracket.

9.

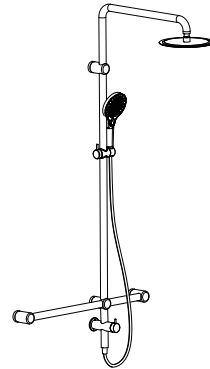

Verify that each connection is securely tightened. Turn on the drainage system and water supply, and inspect all connections for any signs of leakage.

FINAL INSPECTION:

- Ensure the shower operates smoothly and that there are no leaks at the connections.
- Verify that the water temperature and flow are consistent and as desired.
- Clean the area and the newly installed shower with a soft cloth to remove any installation residues.

Nero

