

www.asijdmacdonald.com.au freecall 1800 023 441

Date: January 2019





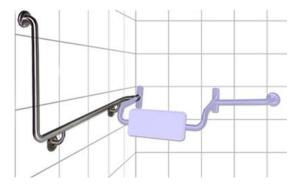


Image GRE07RH (Far Left Rail in Image)
Displayed with PBR35A (Centre) & GRE300 (Right)

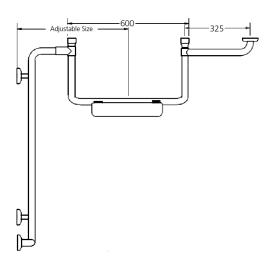

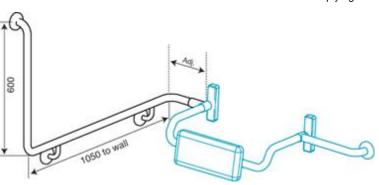

To order a **Combination set** select the codes: GRE07 + PBR35A (or PBR35ASS) + GRE300 for the complete set. For use with exposed cisterns.

SPECIFICATION

To be used in conjunction with ASI JD MacDonald's Drop Down Back Rests for new project applications. This fully welded construction in a satin stainless steel finish to promote durability, reliability and attaches to the arm of the Drop Down Back Rest known as PBR35A and PBR35ASS respectively. Designed for the safety, security and convenience of the physically disabled. Strong Ø75 fixing flanges. Easy to install on most building surfaces. Grab Rails provide flush mounting cover flanges on fully welded tube ends. This results in a single structural unit that is designed to give maximum strength, security and user confidence to support greater loads. Attractive stainless steel cover plates to conceal the flange and fixings.

OPTIONS

ASI JD MacDonald supply this special Grab Rail to satisfy the application in conjunction with ASI JD MacDonald's Drop Down Back Rest PBR35A and PBR35ASS.

Optional finishes available in Polished, Knurled or Powder Coated. Modification lengths and/or finishes available upon request in writing with supplied drawings for pricing.

FINISH

Manufactured from austenitic 18-8 grade 304 satin stainless steel.

RECOMMENDED INSTALLATION


To comply with the Australian Disabled Standards please refer to the AS 1428.1-2009 Standard. Prior to installation of the Back Rest ensure the collar is assembled on the arm of the back rest rail prior to installation of the actual Back Rest and Grab Rail. This rail is also adjustable to the ASI JD MacDonald Back Rests.

WARRANTY

One year.

Grab Rail GRE07 shall be Model No. GRE07 (Right hand model shown = GRE07RH, not shown GRE07LH) as supplied by ASI JD MacDonald.

All ASI JD MacDonald disabled compliant products when installed must be in accordance with AS1428 to ensure the specified product is complying with all washroom specification requirements.

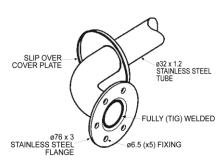

ASI JD MacDonald reserves the right to, and does from time to time, make changes and improvements in design and dimensions. The photographs and line drawings of the products in this flyer are representational only. All dimensions are in millimetres unless otherwise stated.