

RAVEN

RAVEN®

NEW

Threshold Ramp

Threshold Ramp

- Reduce Tripping Hazards
- Slip Resistant Recycled Rubber
- Quick and Easy Installation
- Lower Cost than Cement or Metal Plate
- Meets Access & Mobility Gradient 1:8
- Maintenance Free

Note: The TR025 & TR050 are retrofit threshold ramps, designed to help upgrade non-compliant doorways to meet Australian standard AS1428.1, 10.5.

When a doorway has a rise height above 35mm maximum, the TR050 becomes a user determined solution. A deemed to satisfy compliance if required should be sought from a building engineer or access consultant.



Safety & Convenience at:


- Home
- Work
- Aged Care Facilities
- Retirement Villages
- Apartments
- Hotels, Motels & Shops

A portable aid for delivery drivers!

How to Install



1 Clean area of dirt and dust before installation.

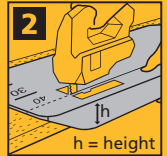

2 If required trim Threshold Ramp with a Jig-saw using a coarse wood cutting blade. Cut along height indicators provided. **Tip:** Adjust speed of Jig-saw for a smooth cut.



3 Simply lay in place or fix permanently with builders adhesive.

Raven Products Pty Ltd
18-22 Aldershot Road
Lonsdale SA 5160
Australia
www.raven.com.au



Available in two convenient sizes (mm)

MODEL TR025
1010 (L) x 200 (W) x 25 (H)

MODEL TR050
1140 (L) x 400 (W) x 50 (H)

***MODEL TR050 DISPLAYED**