



Features:

- Compliant with IEEE802.3ae 10G BASE-LW/LR
- Compliant with 10G Fiber Channel
 1200-M5-SN-I and 1200-M6-SN-I standard
- Compliant with 1.0625G Fiber Channel
 100-M5-SN-I and 100-M6-SN-I standard
- Compliant with IEEE802.3z Gigabit Ethernet standard
- Compliant with SFF8472 diagnostic monitoring
- interface Duplex LC connector
- Differential LVPECL inputs and CML outputs
- Single power supply 3.3V
- TTL signal detect indicator
- Hot Pluggable
- Class 1 laser product complies with EN 60825-1

Ordering Information

PART NUMBER	INPUT/OUTPUT	MONITOR	VOLTAGE	TEMPERATURE
CL-SFP+ LR 10	AC/AC	YES	3.3V	0° C to 70° C
CL-SFP+ LR 10 I	AC/AC	YES	3.3V	-20° C to -85° C

Page 1 of 9 Version 1.0 Date: 1/30/2009

Carelink Technology Co., Ltd

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist,

Taipei 114,R.O.C



Absolute Maximum Ratings

PARAMETER	SYMBOL	MIN	MAX	UNITS	NOTE
Storage Temperature	T_S	-40	85	°C	
Supply Voltage	Vcc	-0.5	4.0	V	
Input Voltage	V_{IN}	-0.5	Vcc	V	
Output Current	I_o		50	mA	
Operating Current	I_{OP}		400	mA	

Recommended Operating Conditions

PARAMETER	SYMBOL	MIN	MAX	UNITS	NOTE
Casa Omaratina Tammaratura	т _	0	70	°C	CL-SFP+ LR 10
Case Operating Temperature	T_C -	-20	85	°C	CL-SFP+ LR 10 I
Supply Voltage	Vcc	3.1	85	V	
Supply Current	$I_{TX} + I_{RX}$		250	mA	_

Transmitter Electro-optical Characteristics

 $Vcc = 3.1 \text{ V to } 3.5 \text{ V}, T_{\text{C}} = 0 \,^{\circ}\text{C to } 70 \,^{\circ}\text{C } (-20 \,^{\circ}\text{C to } 85 \,^{\circ}\text{C})$

PARAMETER	SYMBOL	MIN	TYP.	MAX	UNITS	NOTE
Output Optical Power (50/125 \mu m fiber, NA=0.20) (62.5/125 \mu m fiber, NA=0.275)	P_{out}	-6		-0.5	dBm	
Extinction Ratio	ER	3.5			dB	
Coupled Power Ratio	CPR	9			dB	
Center Wavelength	λ_C	1290	1310	1330	nm	
Spectral Width (RMS)	Δλ			1	nm	
Rise/Fall Time, (20–80%)	$T_{r, f}$				ps	
Relative Intensity Noise	RIN			-128	dB/Hz	
Total Jitter	TJ			227	ps	
Output Eye			Complian	t with IEEE8	302.3z	
Max. P_{out} TX-DISABLE Asserted	P_{OFF}			-45	dBm	
Differential Input Voltage	$V_{\it DIFF}$	0.4		2.0	V	

Page 2 of 9 Version 1.0 Date: 1/30/2009

Carelink Technology Co., Ltd 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist,

Taipei 114,R.O.C



Receiver Electro-optical Characteristics

 $Vcc = 3.1 \text{ V to } 3.5 \text{ V}, T_A = 0 ^{\circ}\text{C to } 70 ^{\circ}\text{C } (-20 ^{\circ}\text{C to } 85 ^{\circ}\text{C})$

PARAMETER	SYMBOL	MIN	TYP.	MAX	UNITS	NOTE
Optical Input Power-maximum	P_{IN}	+0.5			dBm	$BER < 10^{-12}$
Optical Input Power-minimum (Sensitivity)	P_{IN}			-14.4	dBm	BER $< 10^{-12}$
Operating Center Wavelength	λ_C	1260		1355	nm	
Optical Return Loss	ORL	12			dB	
Loss of Signal-Asserted	P_A	-12			dBm	
Loss of Signal-Deasserted	P_D			-20	dBm	
Differential Output Voltage	V_{DIFF}	0.5		1.2	V	
Data Output Rise, Fall Time (20–80%)	$T_{r,f}$			0.35	ns	
Receiver Loss of Signal Output Voltage-Low	RX_LOS_L	0		0.5	V	
Receiver Loss of Signal Output Voltage-High	RX_LOS_H	2.4		V_{CC}	V	


Page 3 of 9 Version 1.0 Date: 1/30/2009

Carelink Technology Co., Ltd 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist,

Taipei 114,R.O.C



Block Diagram of Transceiver

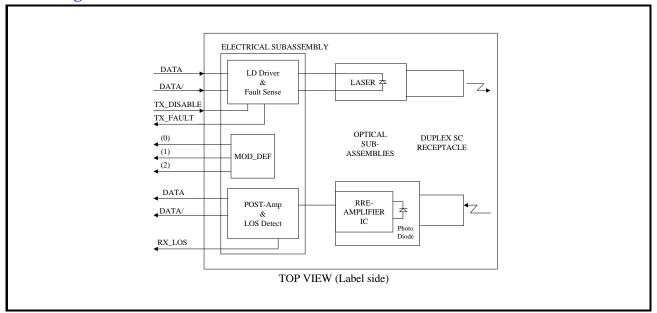

Transmitter Section

The transmitter section consists of a 1310 nm VCSEL in an eye safe optical subassembly (OSA) which mates to the fiber cable. The laser OSA is driven by a LD driver IC which converts differential input LVPECL logic signals into an analog laser driving current.

TX_FAULT

When sensing an improper power level in the laser driver, the SFP set this signal high and turns off the Laser. TX_FAULT can be reset with the TX_DISABLE line. The signal is in TTL level.

TX_DISABLE

The TX_DISABLE signal is high (TTL logic "1") to turn off the laser output. The laser will turn on within 1ms when TX_DISABLE is low (TTL logic "0").

Receiver Section

The receiver utilizes a MSM detector integrated with a trans-impedance preamplifier in an OSA. This OSA is connected to a circuit providing post-amplification quantization, and optical signal detection.

Receive Loss (RX_LOS)

The RX_LOS is high (logic "1") when there is no incoming light from the companion transceiver. This signal is normally used by the system for the diagnostic purpose. The signal is operated in TTL level.


Page 4 of 9 Version 1.0 Date: 1/30/2009 Carelink Technology Co., Ltd

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist,

Taipei 114,R.O.C



Dimensions:

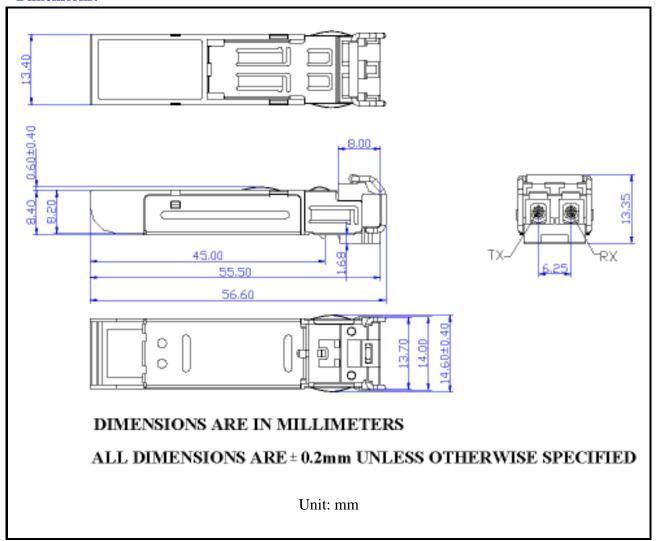


Page 5 of 9 Version 1.0 Date: 1/30/2009

Carelink Technology Co., Ltd 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist,

Taipei 114,R.O.C



SFP host board mechanical layout:

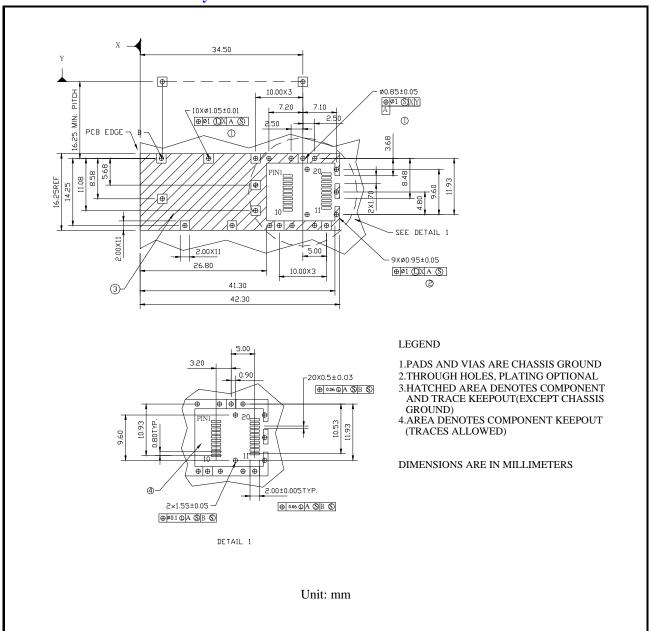

Page 6 of 9 Version 1.0 Date: 1/30/2009


Carelink Technology Co., Ltd

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist,

Taipei 114,R.O.C



Assembly drawing

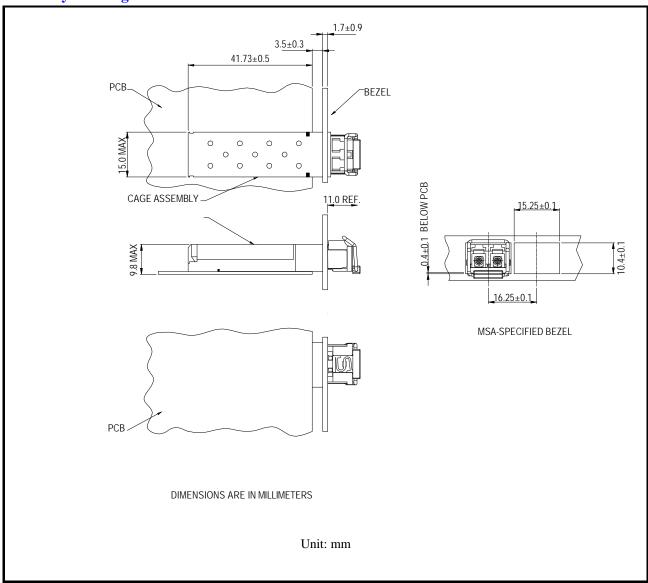


Page 7 of 9 Version 1.0 Date: 1/30/2009

Carelink Technology Co., Ltd 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist,

Taipei 114,R.O.C



Pin Assignment

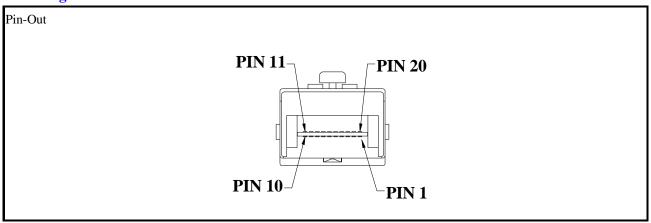

Pin	Signal Name	Description
1	T_{GND}	Transmit Ground
2	TX_FAULT	Transmit Fault
3	TX_DISABLE	Transmit Disable
4	$MOD_DEF(2)$	SDA Serial Data Signal
5	$MOD_DEF(1)$	SCL Serial Clock Signal
6	$MOD_DEF\left(0\right)$	TTL Low
7	RATE SELECT	Open Circuit
8	RX_LOS	Receiver Loss of Signal, TTL High, open collector
9	R_{GND}	Receiver Ground
10	R_{GND}	Receiver Ground
11	R_{GND}	Receiver Ground
12	RX-	Receive Data Bar, Differential PECL, ac coupled
13	RX+	Receive Data, Differential PECL, ac coupled
14	R_{GND}	Receiver Ground
15	V_{CCR}	Receiver Power Supply
16	V_{CCT}	Transmitter Power Supply
17	T_{GND}	Transmitter Ground
18	TX+	Transmit Data, Differential PCEL, ac coupled
19	TX-	Transmit Data Bar, Differential PCEL, ac coupled
20	T_{GND}	Transmitter Ground

Page 8 of 9 Version 1.0 Date: 1/30/2009

Carelink Technology Co., Ltd 16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist,

Taipei 114,R.O.C



Eye Safety Mark

The SFP series multimode transceiver is a class 1 laser product. It complies with EN 60825-1 and FDA 21 CFR 1040.10 and 1040.11. In order to meet laser safety requirements the transceiver shall be operated within the Absolute Maximum Ratings.

Caution

All adjustments have been done at the factory before the shipment of the devices. No maintenance and user serviceable part is required. Tampering with and modifying the performance of the device will result in voided product warranty.

Required Mark

Class 1 Laser Product Complies with 21 CFR 1040.10 and 1040.11

Note: All information contained in this document is subject to change without notice.

Page 9 of 9 Version 1.0 Date: 1/30/2009

Carelink Technology Co., Ltd

16F No.30, Sec.5 Cheng Kong Road, Nei-hu Dist,

Taipei 114,R.O.C