

HCP4015
OPERATING
INSTRUCTIONS &
PARTS MANUAL

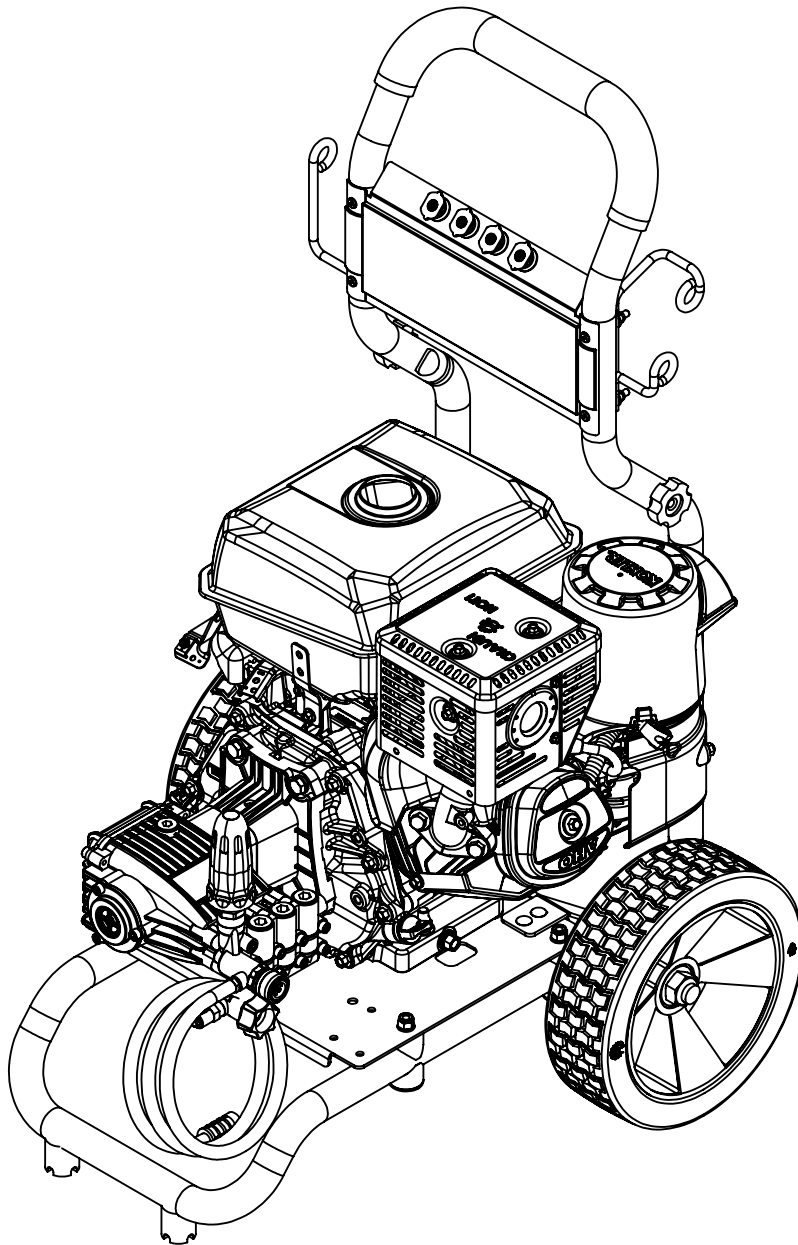


TABLE OF CONTENTS

SERVICE WARNINGS.....PG 3

PARTS BREAKDOWNS

MAIN FRAME.....PG 8

MOTOR PUMP ASSY.....PG 10

ACCESSORIES.....PG 11

PUMP BREAKDOWNS.....PG 12



EXTREMELY HAZARDOUS OR DANGEROUS SITUATION THAT WILL RESULT IN DEATH OR SERIOUS INJURY IF NOT OBEYED OR AVOIDED.



DO NOT FILL OR REFILL THE ENGINE WITH FUEL WHILE THE ENGINE IS RUNNING. STOP THE ENGINE, RELEASE THE PRESSURE IN THE HOSE AND ALLOW THE ENGINE TO COOL FOR AT LEAST 5 MINUTES BEFORE REFUELING.

DO NOT SMOKE WHEN REFILLING ANY FUEL TANKS.

DO NOT REFUEL INDOORS.

REFILL ONLY IN A WELL VENTILATED AREA.

DO NOT OVER FILL TANKS. REFILL TANKS SLOWLY TO AVOID SPILLING FUEL.

DO NOT RESTART MACHINE UNTILL ALL FUEL SPILLS HAVE BEEN THOROUGHLY CLEANED UP AND ANY RESIDUAL FUEL HAS EVAPORATED.

DO NOT STORE THE MACHINE NEAR OPEN FLAME, HEAT SOURCE OR ANY DEVICE THAT COULD CREATE A SPARK.




DO NOT SPRAY FLAMMABLE LIQUIDS.

DO NOT OPERATE PRESSURE WASHER IN THE PRESENCE OF FLAMMABLE LIQUIDS, VAPORS, GASSES, COMBUSTIBLE DUST OR ANY OTHER COMBUSTIBLE MATERIALS.


DO NOT USE CRANKCASE OR WASTE OIL.

DO NOT PUT GASOLINE IN ANY TANK INTENDED FOR FUEL OIL.

USE ONLY No.1 OR No.2 HEATING OIL OR DIESEL FUEL IN THE BURNER TANK.

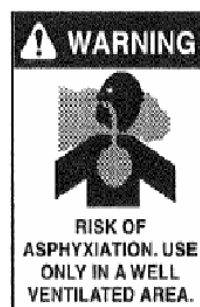

DO NOT OPERATE PRESSURE WASHER IN AN ENCLOSED AREA. **USE ONLY IN A WELL VENTILATED AREA.** PROPER VENTILATION AND OXYGEN SUPPLY IS NEED TO SUSTAIN YOUR LIFE AND FOR THE SAFE AND EFFICIENT OPERATION OF THIS MACHINE.

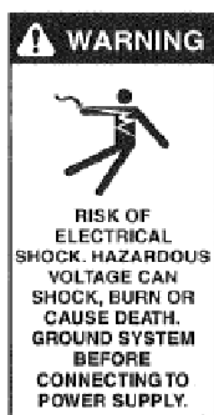

DO NOT DIRECT THE WATER STREAM OR SPRAY AT ANY ELECTRICAL INSTALLATION OF ANY KIND INCLUDING LIGHTS.

DO NOT USE THE WATER STREAM TO CLEAN THE PRESSURE WASHER.

DO NOT USE EXTENSION CORDS. USE ADDITIONAL HOSES.

DO NOT USE THE PRESSURE WASHER IF THE GFCI, CIRCUIT BREAKER OR THERMAL OVERLOAD PROTECTOR TRIPS.

DO NOT USE WHILE RAINING.

DO NOT USE IF POWER SUPPLY CORD IS DAMAGED.

DO NOT REPAIR POWER SUPPLY CORD. REPLACE IT.

DO NOT ALLOW POWER CORD TO LAY IN STANDING WATER.

USE ONLY FACTORY SUPPLIED CORD SET WITH A PROPERLY GROUNDED RECEPTACLE THAT IS EQUIPPED WITH A GROUND FAULT CIRCUIT INTERRUPTER.

USE ONLY A PROPERLY SIZED AND ISOLATED ELECTRICAL SUPPLY CAPABLE OF THE FULL LOAD AMPERAGE THAT THE PRESSURE WASHER REQUIRES.



DO NOT USE THE PRESSURE WASHER WHILE STANDING ON A LADDER OR SCAFFOLDING.

DO NOT USE WHILE STANDING ON PITCHED ROOFS.

WET SURFACE IS SLIPPERY. DANGER OF SLIP AND FALL.



DO NOT POINT THE WATER STREAM AT ANY PERSONS OR ANIMALS.

DO NOT OPERATE IN THE VICINITY OF CHILDREN.

DO NOT USE THE WATER STREAM TO CLEAN ANY PROTECTIVE CLOTHING OR BOOTS.



USE ONLY FACTORY APPROVED IDENTICAL REPLACEMENT PARTS.

DO NOT CHANGE OR TAMPER WITH FACTORY PRESET ADJUSTMENTS. NEVER DEFEAT OR DISABLE ANY SAFETY DEVICES ON THE MACHINE.



DO NOT OPERATE THE UNIT WITH A MALFUNCTIONING BURNER OR BURNER CONTROL. INSPECT BURNER AND BURNER CONTROL OPERATION BEFORE EACH USE. FAILURE TO DO SO MAY RESULT IN AN EXPLOSION OR FIRE. IF YOU SUSPECT A

PROBLEM WITH THE BURNER, DISCONTINUE USE IMMEDIATELY AND CONTACT YOUR LOCAL AUTHORIZED DISTRIBUTOR.


WARNING! (Liquid Petroleum or Natural Gas Fired Units)

FOR YOUR SAFETY, IF YOU SMELL GAS:

1. OPEN WINDOWS.
2. DO NOT TOUCH ELECTRICAL SWITCHES.
3. TURN OFF BREAKER SWITCH SUPPLYING POWER TO UNIT. CLOSE GAS SUPPLY VALVE TO UNIT.
4. EXTINGUISH ANY OPEN FLAME.
5. IMMEDIATELY EVACUATE PREMISES AND CALL YOUR GAS SUPPLIER.
6. MACHINES CAN CAUSE AN EXPLOSION WHEN OPERATED NEAR FLAMMABLE MATERIALS AND VAPORS. DO NOT- USE THIS MACHINE WITH OR NEAR FUELS, GRAIN DUST, SOLVENTS, THINNERS OR OTHER FLAMMABLE MATERIALS.
7. THIS UNIT MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE GAS CODES. FAILURE TO DO SO COULD RESULT IN INJURY OR DEATH TO YOU OR TO OTHER PERSONNEL.
8. USE NO. 1 OR NO. 2 FUEL OIL ONLY IN OIL FIRED MACHINES. NEVER INTRODUCE GASOLINE TO THE FUEL OIL TANK. DOING SO COULD RESULT IN AN EXPLOSION OR FIRE. KEEP THE PROPER FUEL IN THE PROPER TANK.



POTENTIALLY HAZARDOUS SITUATION THAT COULD RESULT IN DEATH OR SERIOUS INJURY IF NOT OBEYED OR AVOIDED.

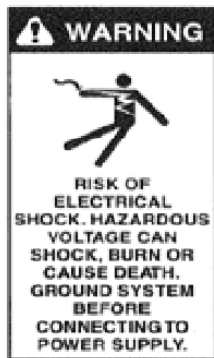

DISCONNECT POWER BEFORE SERVICING THE PRESSURE WASHER.

DISCONNECT SPARK PLUG BEFORE SERVICING THE PRESSURE WASHER.

DO NOT DIRECT THE WATER STREAM OR SPRAY AT ANY ELECTRICAL INSTALLATION OF ANY KIND INCLUDING LIGHTS.



DO NOT TOUCH HOT SURFACES. EG. MUFFLER, BURNER, ENGINE, HEAT EXCHANGER, EXHAUST HEAD.

USE ONLY INSULATED EXTENSION WAND WITH HOT WATER.

DO NOT ALLOW HOSES TO TOUCH HOT SURFACE.



DO NOT USE PRESSURE WASHER WITHOUT PROPER PROTECTIVE WEAR. USE EYE PROTECTION, RUBBER GLOVES, RUBBER BOOTS, AND PROTECTIVE CLOTHING.

DO NOT USE CORROSIVE OR AGGRESSIVE CHEMICALS WITHOUT PROPER PROTECTIVE WEAR.

THIS MACHINE PRODUCES HOT WATER AT VERY HIGH PRESSURES. USE ONLY APPROVED ACCESSORIES RATED FOR HOT WATER AND HIGH PRESSURE.



**POTENTIALLY HAZARDOUS SITUATION
THAT COULD RESULT IN PERSONAL
INJURY OR PROPERTY DAMAGE IF NOT
OBEYED OR AVOIDED.**

DO NOT LEAVE THE PRESSURE WASHER RUNNING UNATTENDED. TURN THE MACHINE OFF AND RELEASE ALL PRESSURE FROM THE SYSTEM.

DO NOT DEFEAT THE TRIGGER GUN SAFETY

DO NOT LOCK THE TRIGGER IN THE OPEN POSITION IN ANY WAY.

KNOW THE MACHINE CONTROLS AND HOW TO QUICKLY SHUT DOWN AND RELEASE ALL PRESSURE IN THE SYSTEM.

DO NOT OPERATE THE MACHINE WITHOUT ALL GUARDS AND PROTECTIVE COVERS IN PLACE.

DO NOT ALLOW ANY PART OF PERSONS OR HOSES TO CONTACT HOT SURFACES.

DO NOT HAVE ENGINE EXHAUST POINTING AT FLAMMABLE MATERIALS.

INSPECT THE PRESSURE WASHER AND HOSES FOR DAMAGED PARTS DAILY.

REPAIR LEAKS AS THEY HAPPEN TO PREVENT FURTHER DAMAGE.

DO NOT OPERATE WITH ANY FAULTY OR DAMAGED COMPONENTS.

DISCONNECT POWER CORD, BATTERY NEGATIVE AND SPARK PLUG BEFORE PERFORMING ANY SERVICE ON THE PRESSURE WASHER.

KEEP ALL HOSES AND POWER CORDS AWAY FROM VEHICLE TRAFFIC.

DO NOT MOVE THE MACHINE BY PULLING ON THE HOSE.

DO NOT LEAVE THE MACHINE EXPOSED TO HARSH ENVIRONMENTS.


DO NOT OPERATE THE MACHINE IN THE RAIN.

DO NOT DIRECT THE HIGH PRESSURE WATER STREAM AT FRAGILE OBJECTS.

DO NOT USE ANY ACCESSORIES UNLESS THEY ARE RATED AT OR ABOVE THE WORKING PRESSURE AND TEMPERATURE OF THE MACHINE.


ALWAYS USE EYE, FACE, HAND, FOOT, HEARING, AND BODY PROTECTIVE WEAR.

DO NOT OPERATE PRESSURE WASHER IF FATIGUED OR UNDER THE INFLUENCE OF ALCOHOL OR DRUGS. **BE ALERT AT ALL TIMES.**

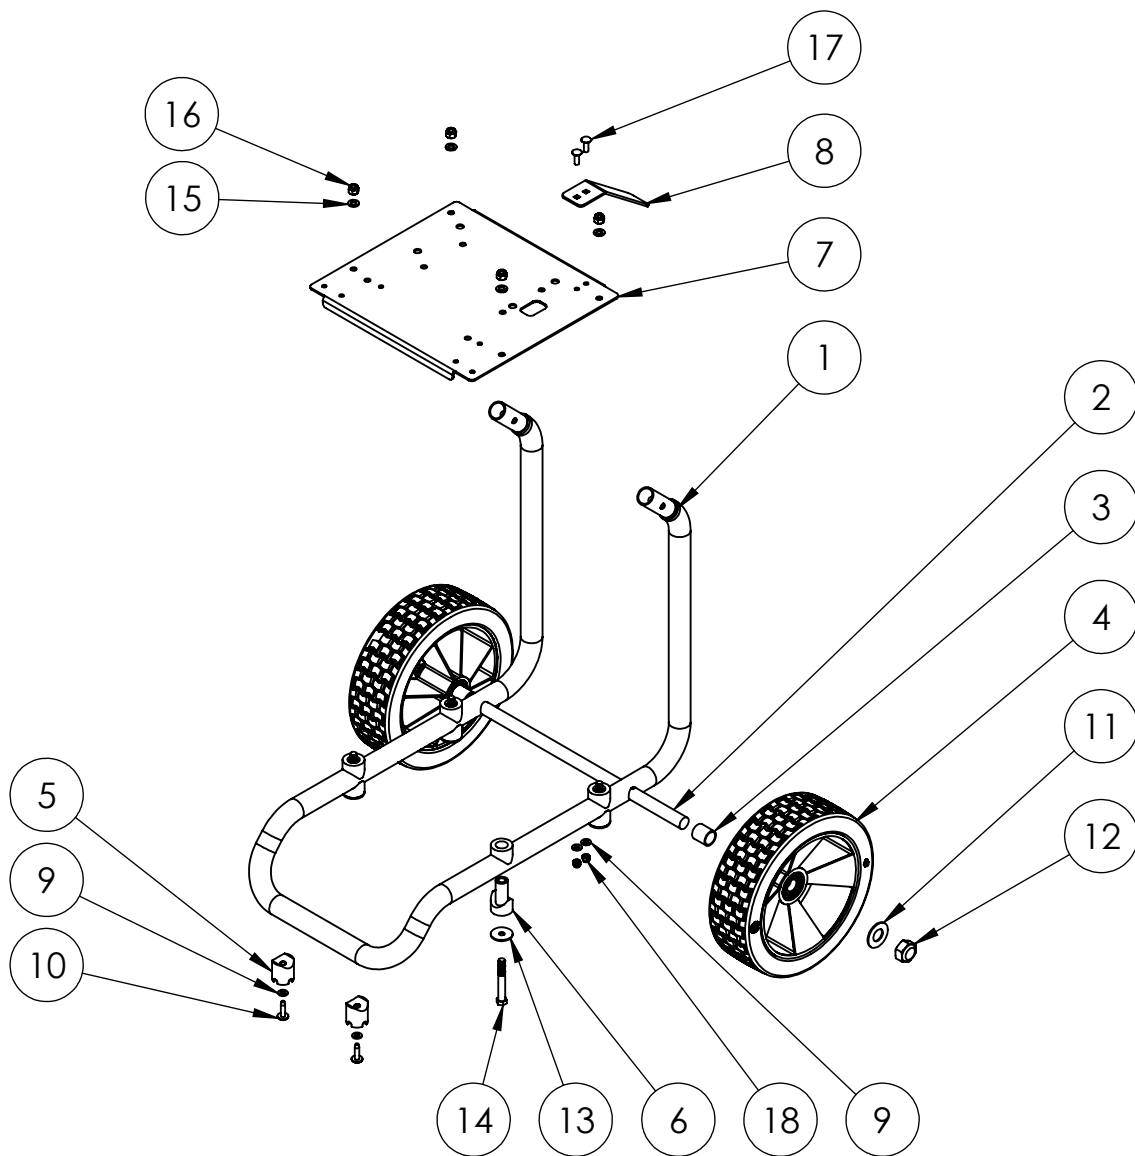


ITEM NO.		PART NUMBER	DESCRIPTION	QTY.
1		00124	FRAME, BASE TUBE	1
2		00126	AXLE, 545MM, THREADED	1
3		00105	SPACER, WHEEL	2
4	*	PP 00107	WHEEL ASSY, FLAT FREE, 10.3" DIA	2
5	*	PP 00108	RUBBER FOOT	2
6		00132	VIBRATION ISOLATOR, 60 DURO	4
7		00127	BASE PLATE	1
8		00128	KICK STAND	1
9		00120	FLAT WASHER, M6	4
10		00121	1/4-20 X 1 TORX SCREW	2
11		00118	FLAT WASHER, 19MM	2
12		00119	M18 X 1.5 NYLON LOCK NUT	2
13		00116	FLAT WASHER, M8 X 32	4
14		00115	HEX BOLT, M8-1 X 70	4
15		00114	FLAT WASHER, M8	4
16		00117	NYLON LOCK NUT, M8-1	4
17		00131	M6-1 X 20MM CARRIAGE BOLT	2
18		00123	NYLON LOCK NUT, M6-1	2

Please Note: Only items with * currently available. All others part are non stocked items.

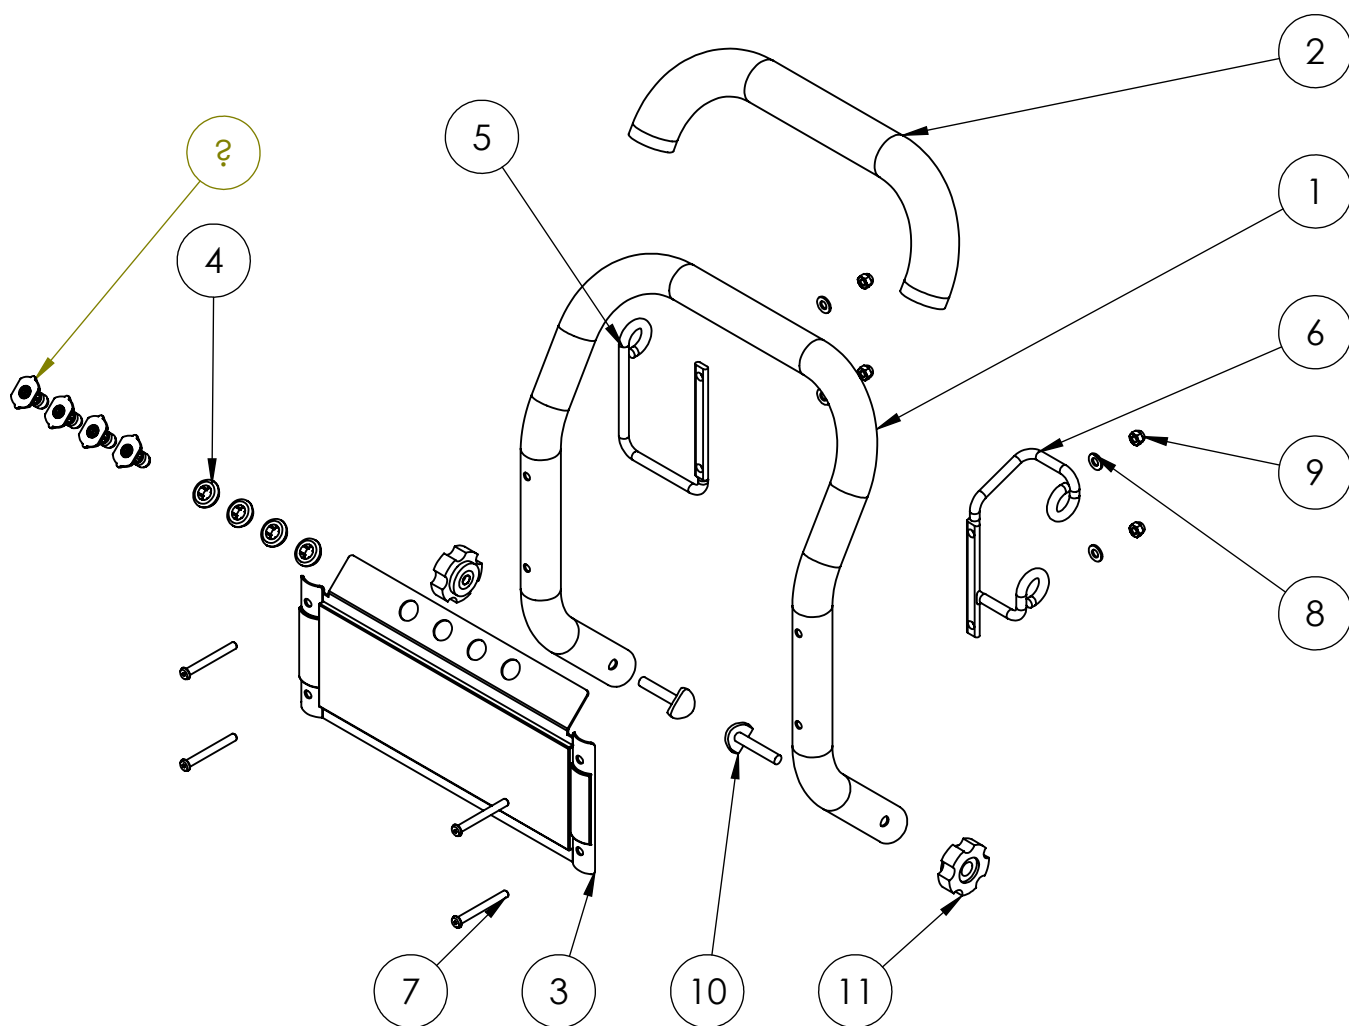


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	00125	HANDLE, TUBE	1
2	00129	FOAM GRIP	1
3	00130	NOZZLE BRACKET	1
4	00133	GROMMET, BLACK RUBBER	4
5	00112	HANGER, HOSE	1
6	00113	HANGER, GUN	1
7	00122	BHCS, M6-1 X 55	4
12	* PP D00040	RED NOZZLE Zero degree	1
12	* PP D15040	YELLOW NOZZLE 15 degree	1
12	* PP D25040	GREEN NOZZLE 25 degree	1
12	* PP 940040Q	WHITE NOZZLE 40 degree	1
12	* PP 9654000Q	BLACK DUMP NOZZLE	1

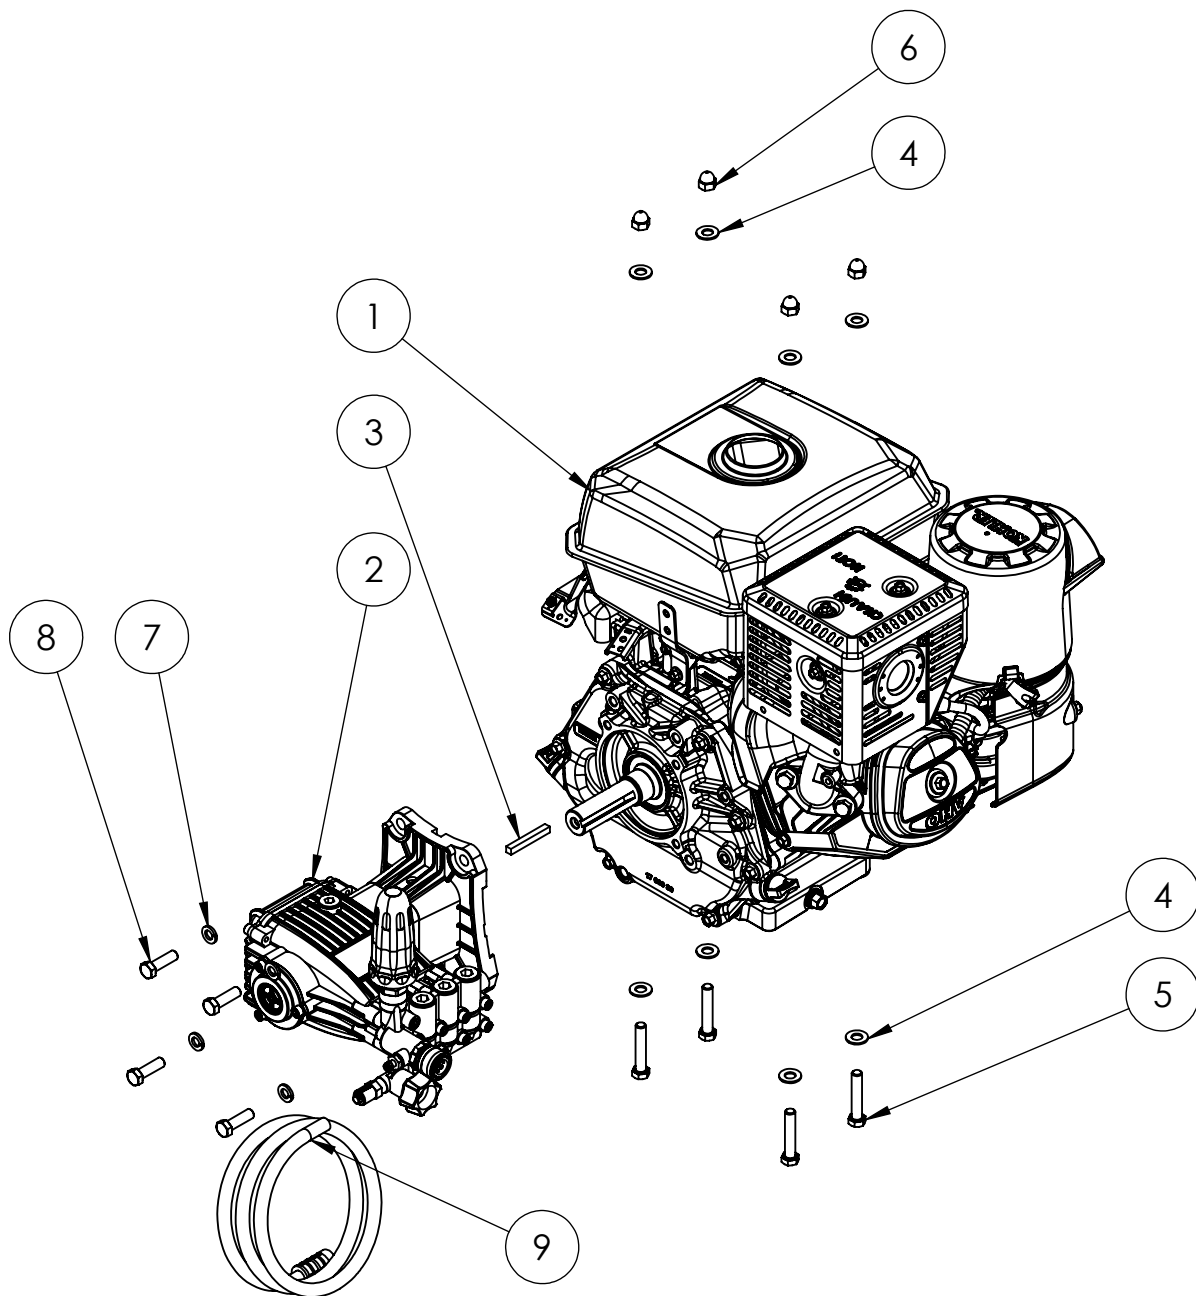


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	P. O. A.	ENGINE, 14 HP KOHLER, 1" CRANKSHAFT, MANUAL START	1
2 *	CP 66DX30G11	CAT Pump, CRANKSHAFT, 4 GPM, 4500 PSI	1
3	PKY020	KEY, DRIVE, 1/4 X 2	1
4	111 037 500 100	FLAT WASHER, USS, 3/8	8
5	105 061 602 000	HHCS, USS, GR5, 3/8 X 2	4
6	130 061 600 000	NYLOCK NUT, USS, 3/8-16	4
7	131 037 500 100	LOCK WASHER, 3/8	4
8	105 061 601 250	HHCS, 3/8-16 X 1 1/4 GR5	4
9 *	PP ACI900	INJECTOR HOSE ASSEMBLY	1


Please Note: Only items with * currently available. All others part are non stocked items.

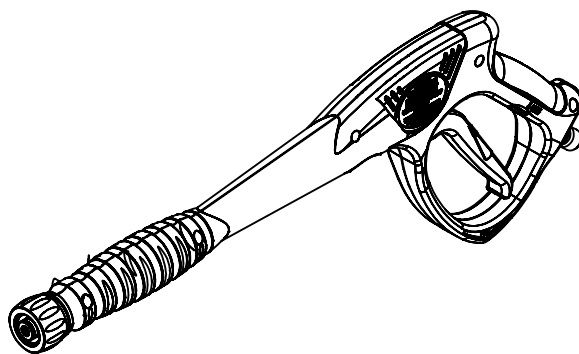

PP ZG45RS02 *

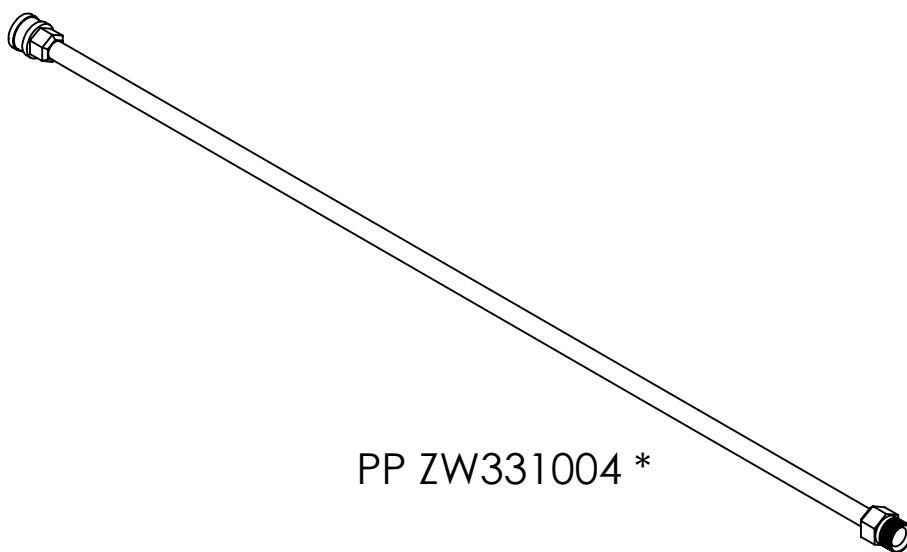

PP ZW331004 *

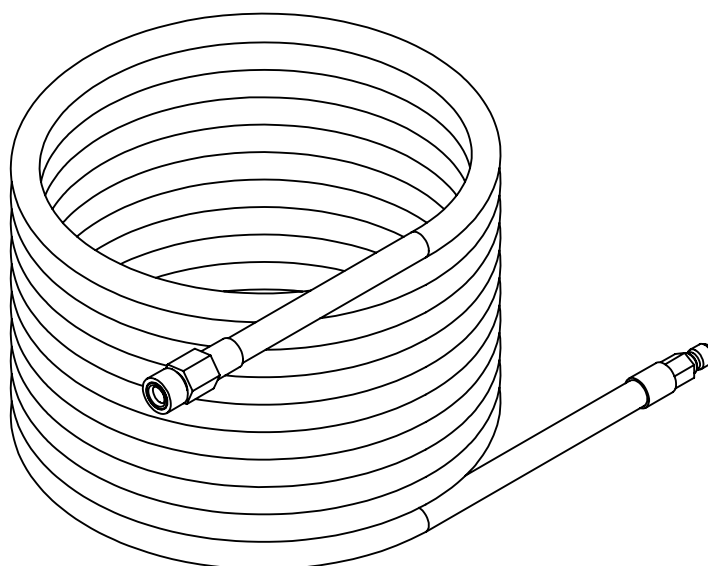


PP AHSZ050 *

DATA SHEET

DIRECT DRIVE PLUNGER PUMPS



Brass Models: 66DX30G1I, 66DX35G1I, 66DX40G1I

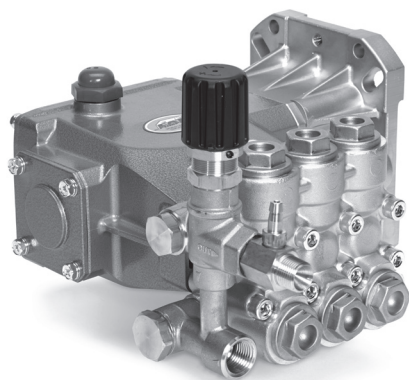

FEATURES

- Triplex plunger design ensures high efficiency and low pulsation.
- Compact flange mount permits easy, direct mounting to most gas engines*
- Integral regulating unloader with built-in bypass ensures system pressure control and pump protection.**
- Fixed chemical injector aids in cleaning flexibility.
- Pump comes standard with NBR seals. Alternative seal materials are available for higher temperature or chemical compatibility.

*Gas Mounting Flange: SAE J609, Flange B, Extension 4 (1" Ø), Shaft Length = 3 1/4", Pilot Ø = 5 3/4", BC. Ø = 6 1/2", Thread 3/8"-16 UNC Tap

**Available without an unloader. (66DX30GGI, 66DX35GGI, 66DX40GGI)

COMMON

SPECIFICATIONS	U.S. Measure	Metric Measure
Pump RPM	3400 rpm	3400 rpm
Inlet Pressure Range	Flooded to 75 psi	Flooded to 5.2 bar
Max. Liquid Temperature (NBR)	140° F	60° C
Alternate seals available for higher temperature up to 180° F		
Bore	0.551"	14 mm
Crankcase Capacity	18.0 oz	0.53 l
Inlet Ports (2)	1/2" NPT(F)	1/2" NPT(F)
Discharge Ports (2)	3/8" NPT(F)	3/8" NPT(F)
Shaft Diameter (Hollow)	1.0"	25.4 mm
Engine Mounting Face	6.5"	6.5"
Weight	26.15 lbs	11.9 kg
Dimensions (Pump Only)	11.73 x 10.51 x 8.15"	298 x 267 x 207 mm

SPECIFICATIONS

	U.S. Measure	Metric Measure
Model 66DX30G1I		
Flow	3.0 gpm	11.4 lpm
Pressure Range	100–4000 psi	6.9–275 bar
Stroke	0.339"	8.6 mm
Model 66DX35G1I		
Flow	3.5 gpm	13.2 lpm
Pressure Range	100–4000 psi	6.9–275 bar
Stroke	0.394"	10.0 mm
Model 66DX40G1I		
Flow	4.0 gpm	15.0 lpm
Pressure Range	100–4000 psi	6.9–275 bar
Stroke	0.449"	11.4 mm

ALTERNATIVE SEAL CONFIGURATION

MATERIAL	SUFFIX CODE	MAXIMUM TEMPERATURE	
NBR	—	140° F	(60° C)
FPM	.0110	180° F	(82° C)

See **Tech Bulletin 002** for inlet conditions and RPM at high-temperature.

TORQUE AND HORSEPOWER REQUIREMENTS

MODELS	FLOW		PRESSURE						PUMP RPM
	GPM	LPM	PSI	BAR	PSI	BAR	PSI	BAR	
			2500	172	3000	207	4000	275	
Torque									
66DX30GII	3.0	11.4	7.9 ft-lbs	9.5 ft-lbs	12.7 ft-lbs	3400			
66DX35GII	3.5	13.2	9.3 ft-lbs	11.1 ft-lbs	14.8 ft-lbs	3400			
66DX40GII	4.0	15.0	10.6 ft-lbs	12.7 ft-lbs	16.9 ft-lbs	3400			
Horsepower*									
66DX30GII	3.0	11.4	6.6 hp	7.8 hp	10.5 hp	3400			
66DX35GII	3.5	13.2	7.7 hp	9.2 hp	12.3 hp	3400			
66DX40GII	4.0	15.0	8.9 hp	10.5 hp	14.0 hp	3400			

*HP is for estimate only. Torque values of the engine at given rpm should be used to determine correct size of engine.

Consult engine manufacture for actual torque available at required speed.

DETERMINING THE PROPER TORQUE

$$\text{Torque (ft-lbs)} = 3.6 \times \frac{\text{gpm} \times \text{psi}}{\text{rpm}}$$

DETERMINING THE REQUIRED HP


$$\text{Engine hp (Estimated)} = \frac{\text{gpm} \times \text{psi}}{1140}$$

DETERMINING THE PUMP RPM

$$\frac{\text{Rated gpm}}{\text{Rated rpm}} = \frac{\text{Desired gpm}}{\text{Desired rpm}}$$

Refer to pump **Service Manual** for repair procedure and additional technical information.

EXPLODED VIEW

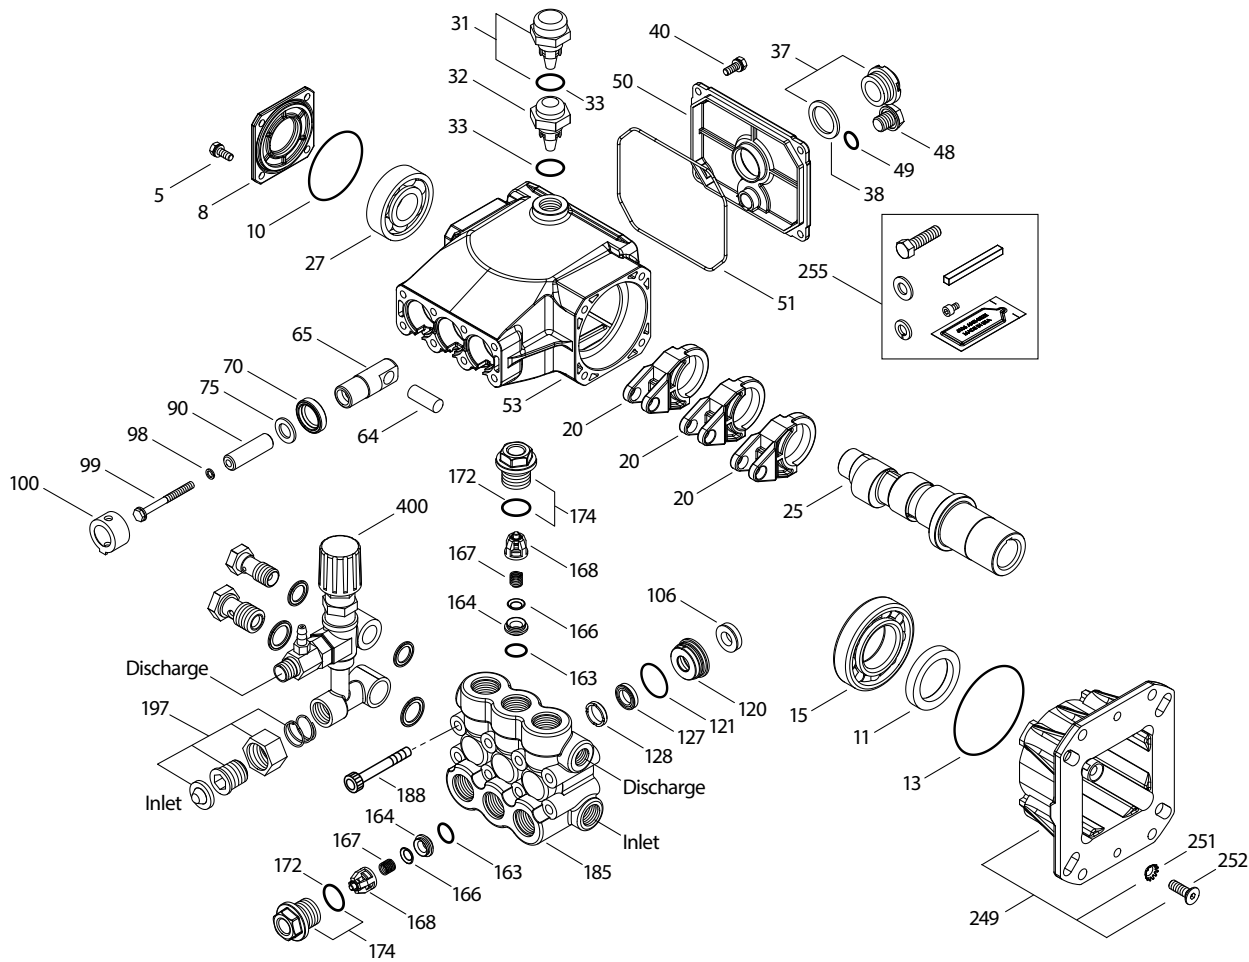

PARTS LIST

ITEM	P/N	MATL DESCRIPTION	QTY
5	125824	STCP R Screw, HHC (M6 x 16) (See Tech Bulletin 074)	4
8	48259	AL Cover, Bearing (Blind)	1
10	14028	NBR O-Ring, Bearing Cover-70D	1
11	125351	NBR Seal, Oil, Crankshaft	1
13	14037	NBR O-Ring, Bearing Cover	1
15	146421	STL Bearing, Inner, Ball	1
20	48843	TNM Rod, Connecting	3
25	48970	CM Crankshaft, 1" (8.6 mm) (30G11)	1
	48977	CM Crankshaft, 1" (10.0 mm) (35G11)	1
	48839	CM Crankshaft, 1" (11.4 mm) (40G11)	1
27	14480	STL Bearing, Outer, Ball	1
31	127409	— Cap, Vented with O-Ring (Rain Cap)	1
32	46798	— Cap, Domed, Oil Filler	1
33	14179	NBR O-Ring, Filler Cap-70D	1
37	92241	PC Gauge, Oil Bubble with Gasket-80D (See Tech Bulletin 074)	1
38	44428	NBR Gasket, Flat, Oil Gauge-80D	1
40	125824	STCP R Screw, HHC (M6 x 16) (See Tech Bulletin 074)	4
48	25625	STCP Plug, Drain (1/4" x 19 BSP)	1
49	23170	NBR O-Ring, Drain Plug-70D	1
50	48862	AL Cover, Rear	1
51	14048	NBR O-Ring, Rear Cover	1
53	48830	AL Crankcase	1
64	46404	CM Pin, Crosshead	3
65	48845	BB Rod, Plunger	3
70	48911	NBR Seal, Oil, Crankcase	3

ITEM	P/N	MATL DESCRIPTION	QTY
75	48754	NBR Slinger, Barrier	3
90	48752	CC Plunger (M14 x 47)	3
98	46730	NBR Washer Seal, Plunger Retainer-90D	3
99	† 48201	SS Retainer, Plunger (See Tech Bulletin 074)	3
100	48755	NY Retainer, Seal	3
106	45188	NBR Seal, LPS with S-Spring	3
120	48759	BB Case, Seal	3
121	13980	NBR O-Ring, Seal Case-70D	3
127	48758	SNG V-Packing	3
128	48757	NY Adapter, Male	3
163	17547	NBR O-Ring, Seat-85D	6
164	45790	S Seat	6
166	46429	S Valve	6
167	43750	S Spring	6
168	† 44565	PVDF Retainer, Spring	6
172	17616	NBR O-Ring, Valve Plug-80D	6
174	48760	BB Plug, Valve with O-Ring (See Tech Bulletin 074)	6
185	48846	BB Head, Manifold	1
188	126512	STCP R Screw, HSH (M8 x 65) (See Tech Bulletin 074)	8
197	941517	BB Assembly, GH [1/2" NPT(M) x 3/4" GH(F)]	1
249	48841	AL Flange, Adapter	1
251	126746	STCP R Lockwasher, Conical (M8)	4
252	46403	STL Screw, FH (M8 x 25)	4
255	30510	STZP Assembly, Bolt Mount	1
400	7860	BB Unloader Assembly with Fixed Injector (Eff. 04/07)	1

Bold Part Numbers are unique to a particular pump model. Italics are optional items.

R Components comply with RoHS Directive. † Production parts different from service parts. For additional technical information see www.catpumps.com/literature/tech-bulletins.

MATERIAL CODES (Not Part of Part Number): AL=Aluminum BB=Brass CC=Ceramic CM=Chrome-moly FPM=Fluorocarbon NBR=Medium Nitrile (Buna-N) NY=Nylon


PC=Poly Carbonate PVDF=Polyvinylidene Fluoride S=304SS SNG=Special Blend (Buna) SS=316SS STCP=Steel/Chrome Plated STG=Special Blend PTFE White

STL=Steel STZP=Steel/Zinc Plated ST4=Special PTFE4 TNM=Special High Strength

MODEL 7860 UNLOADER WITH INJECTOR

SPECIFICATIONS

	U.S.	Metric
Flow Range	3.0–5.0 gpm	7.6–19.0 lpm
PSI Range	700–4000 psi	50–275 bar
Inlet Port, Side	½" NPT(F)	½" NPT(F)
Discharge Port, Front	¾" NPT(M)	¾" NPT(M)
Weight	35.2 oz	1.0 kg
Dimensions	4.65 x 170 x 6.75"	118 x 43 x 171 mm

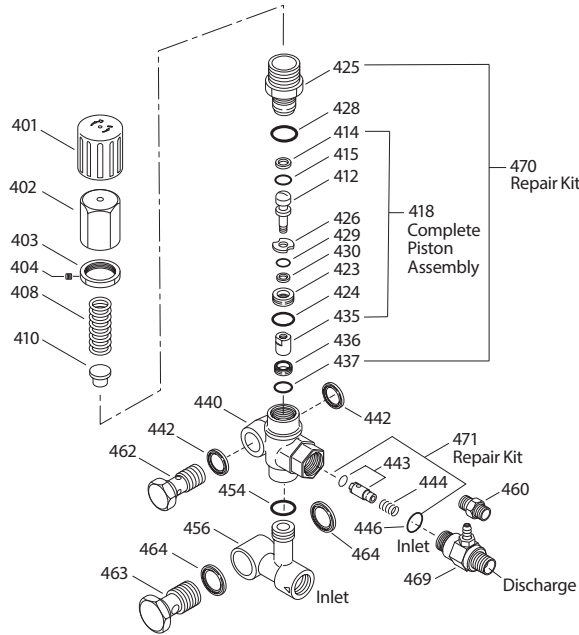

PARTS LIST

ITEM	P/N	MATL	DESCRIPTION	QTY
401	49100	NY	Handle, Adjusting (Black)	1
402	49099	BB	Cap, Adjusting	1
403	125521	BB	Nut, Locking (M25 x 1)	1
404	88953	S	Screw, Set (M4 x 4)	1
408	45198	ZP R	Spring, Pressure	1
410	49101	STZP R	Retainer, Spring	1
412	49103	S	Stem, Piston	1
414	129638	PTFE	Backup Ring, Piston Stem	1
415	49104	NBR	O-Ring, Piston Stem–90D	1
418	—	BB	Assembly, Piston (Included in Repair Kit)	1
423	49105	BB	Retainer, Valve	1
424	49106	NBR	O-Ring, Valve Retainer–70D	1
425	49102	BB	Retainer, Piston	1
426	49107	S	Washer	1
428	26133	NBR	O-Ring, Piston Retainer–80D	1
429	22056	NBR	O-Ring, Valve Retainer–70D	1
430	49123	D	Backup Ring, Valve Retainer	1
435	49383	S	Valve/Ball Assembly	1
436	49384	S	Seat	1
437	13965	NBR	O-Ring, Seat–70D	1
440	—	BB	Valve Body	1
442	49121	STL	Washer, Seal (¾")	2
443	49245	BB	Valve, Check with NBR O-Ring	1
444	117275	S	Spring, Check Valve	1
446	26133	NBR	O-Ring, Body–80D	1
454	11346	NBR	O-Ring, Manifold–70D	1
456	—	BB	Manifold	1
460	126974	BB	Fitting, Discharge [¾" NPT(M)]	1
462	49120	BB	Screw, Flo-Thru [¾" NPT(M)]	1
463	49117	BB	Screw, Flo-Thru [½" NPT(M)]	1
464	49118	STL	Washer, Seal (½")	2
468	31708	NBR	Kit, O-Ring (Includes: 414, 415, 424, 428–430, 437, 446, 454)	1
469	7367	BB	Injector, Chemical Fixed	1
470	31556	NBR	Kit, Repair (Includes: 418, 425, 428, 436, 437)	1
471	76185	NBR	Kit, Check Valve (Includes: 443, 444, 446)	1


Italics are optional items. R Components comply with RoHS Directive.

MATERIAL CODES (Not Part of Part Number): BB=Brass D=Acetal
NBR=Medium Nitrile (Buna-N) NY=Nylon PTFE=Pure Polytetrafluoroethylene
S=304SS STL=Steel STZP=Steel/Zinc Plated ZP=Zinc Plated

MODEL 7367 FIXED CHEMICAL INJECTOR

SPECIFICATIONS

	U.S.	Metric
Flow Range	3.0–5.0 gpm	11.4–19.0 lpm
Nozzle Orifice	2.1 mm	2.1 mm
Hose Barb - Extension	¼"	¼"
Inlet Port	M20 x 1	M20 x 1
Discharge Port	¾" NPT(M)	¾" NPT(M)
Weight	5.3 oz	0.15 kg
Dimensions	2.0 x 1.0 x 1.75"	52 x 25 x 44 mm

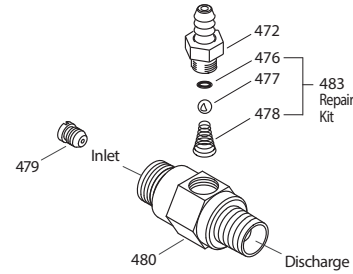

PARTS LIST

ITEM	P/N	MATL	DESCRIPTION	QTY
472	49132	BB	Barb, Fix	1
476	—	NBR	O-Ring, Barb–70D	1
477	—	S	Ball	1
478	—	S	Spring	1
479	—	S	Orifice	1
480	—	BB	Body	1
483	76176	NBR	Kit, Repair (Includes: 476, 477, 478)	1

MATERIAL CODES (Not Part of Part Number):
BB=Brass NBR=Medium Nitrile (Buna-N) S=304SS

CHEMICAL INJECTOR PERFORMANCE CHART

Desired Pump Flow	Orifice Size	Maximum Injecting Pressure	Maximum Chemical Draw	Pressure Drop Across Injector At System Pressure (4000 psi)
3.0	2.1 mm	190 psi	70.0 oz/min	136 psi
3.5	2.1 mm	260 psi	74.2 oz/min	245 psi
4.0	2.1 mm	358 psi	76.8 oz/min	288 psi

Optimum performance of chemical injector occurs with a 35 ft high-pressure hose and a minimum ¾" I.D. The type of hose, extended lengths, reduced I.D. and fittings may create back pressures in excess of the low-pressure nozzle rating and prevent the injector from drawing chemical. **Deduct hose friction loss from above low psi nozzle. Contact Cat Pumps for assistance with other options.**

Note: Deduct the pressure drop shown in the performance chart from your desired system pressure to arrive at the maximum high-pressure nozzle rating. This is essential to avoid over-pressurizing the pump.

UNLOADER TYPE

A modular regulating unloader with chemical injector comes with each 66DX pump to provide system pressure regulation, pump protection and metered chemical application.


OPERATION:

Purge pump of air before commencing operation by allowing liquid to flow through the pump without discharge restriction. Removing trapped air will ensure full system pressure can be obtained. Install a pressure gauge close to the manifold head of the pump to assist in setting system pressure and to periodically monitor system pressure. Setting and adjusting the unloader pressure must be done with the system turned on. Start the system with the unloader backed off to the lowest pressure setting (counterclockwise direction). Squeeze the trigger and read the pressure on the gauge at the pump. Do not read pressure at the gun or nozzle. If more pressure is desired, release the trigger, turn adjusting cap one quarter turn in a clockwise direction. Squeeze the trigger and read the pressure. Repeat this process until the desired system pressure is reached. Thread locking nut up to adjusting cap and tighten set screw. All high-pressure systems should have a secondary relief valve. Set secondary relief valve 200–300 psi above the unloader setting.

NOTE: Pressure is not set at the factory.

SERVICE:

The unloader should be serviced on the same schedule as the seals in the pump. Refer to 66DX Service Manual for start-up, servicing of seals and valves, torque requirements and Diagnosis/Maintenance chart.

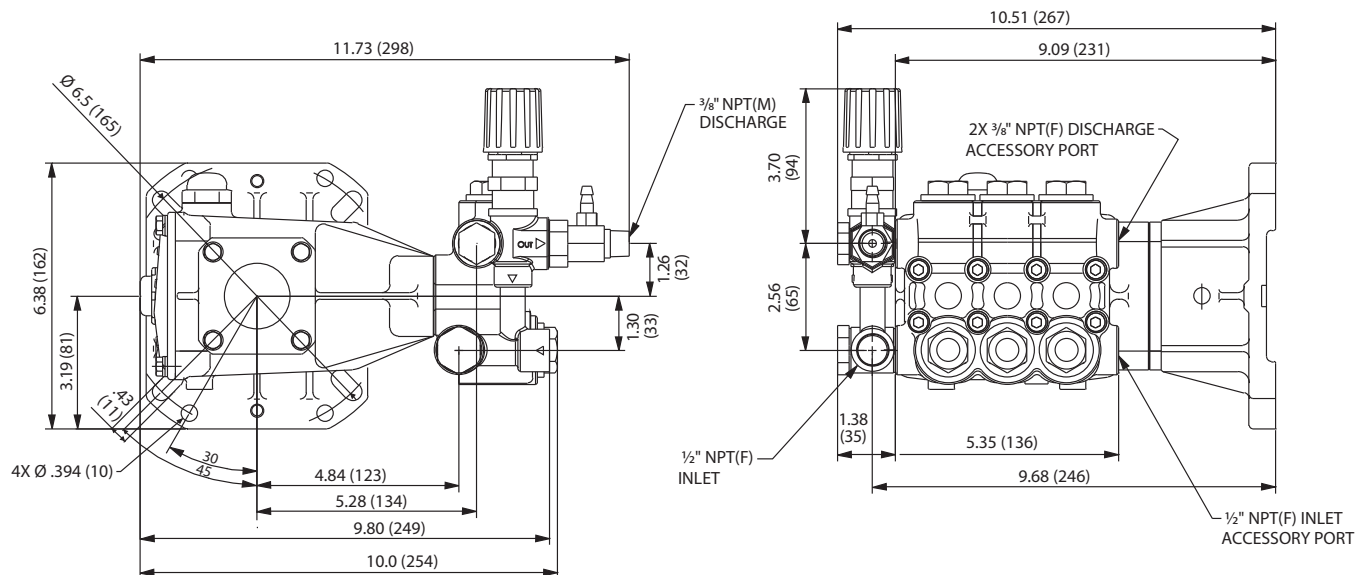

SEAL KITS One (1) seal kit required per pump

PUMP MODEL	NBR (STD)	FPM (.0110)
66DX30G1I, 66DX35G1I, 66DX40G1I	34262	32376*

ITEM (Included in Seal Kits)			DESCRIPTION	QTY
98	46730	48394	Washer, Seal	3
106	45188	704649	Seal, LPS with S-Spring	3
121	13980	14330	O-Ring, Seal Case	3
127	48758	49201	V-Packing	3
128	48757	48757	Adapter, Male	3

* Review individual parts in each kit for material code identification

VALVE KITS Two (2) valve kits required per pump

PUMP MODEL	NBR (STD)	FPM (.0110)
66DX30G1I, 66DX35G1I, 66DX40G1I	34260	32375

ITEM (Included in Valve Kits)			DESCRIPTION	QTY
163	17547	11685	O-Ring, Seat	3
164	45790	45790	Seat	3
166	46429	46429	Valve	3
167	43750	43750	Spring	3
168	44565	44565	Retainer, Spring	3
172	17616	11686	O-Ring, Valve Plug	3

⚠ CAUTIONS AND WARNINGS

All high-pressure systems require a primary pressure regulating device (i.e. regulator, unloader) and a secondary pressure relief device (i.e. pop-off valve, relief valve). Failure to install such relief devices could result in personal injury or damage to pump or property. Cat Pumps does not assume any liability or responsibility for the operation of a customer's high-pressure system. Read all CAUTIONS and WARNINGS before commencing service or operation of any high-pressure system. The CAUTIONS and WARNINGS are included in each Service Manual and with each Accessory Data sheet. CAUTIONS and WARNINGS can also be viewed online at www.catpumps.com/dynamic-literature/cautions-and-warnings or can be requested directly from Cat Pumps.

WARRANTY

View the Limited Warranty online at www.catpumps.com/literature/cat-pumps-limited-warranty

CAT PUMPS 1681 94th Lane N.E., Minneapolis, MN 55449-4324 P: (763) 780-5440 F: (763) 780-2958 E: techsupport@catpumps.com www.catpumps.com

©2021 Cat Pumps Inc. All rights reserved. All data contained in this document are based on the latest product information available at the time of publication. Cat Pumps reserves the right to make changes at any time without notice.